


Type 1098-EGR Downstream Wide-Open Monitor

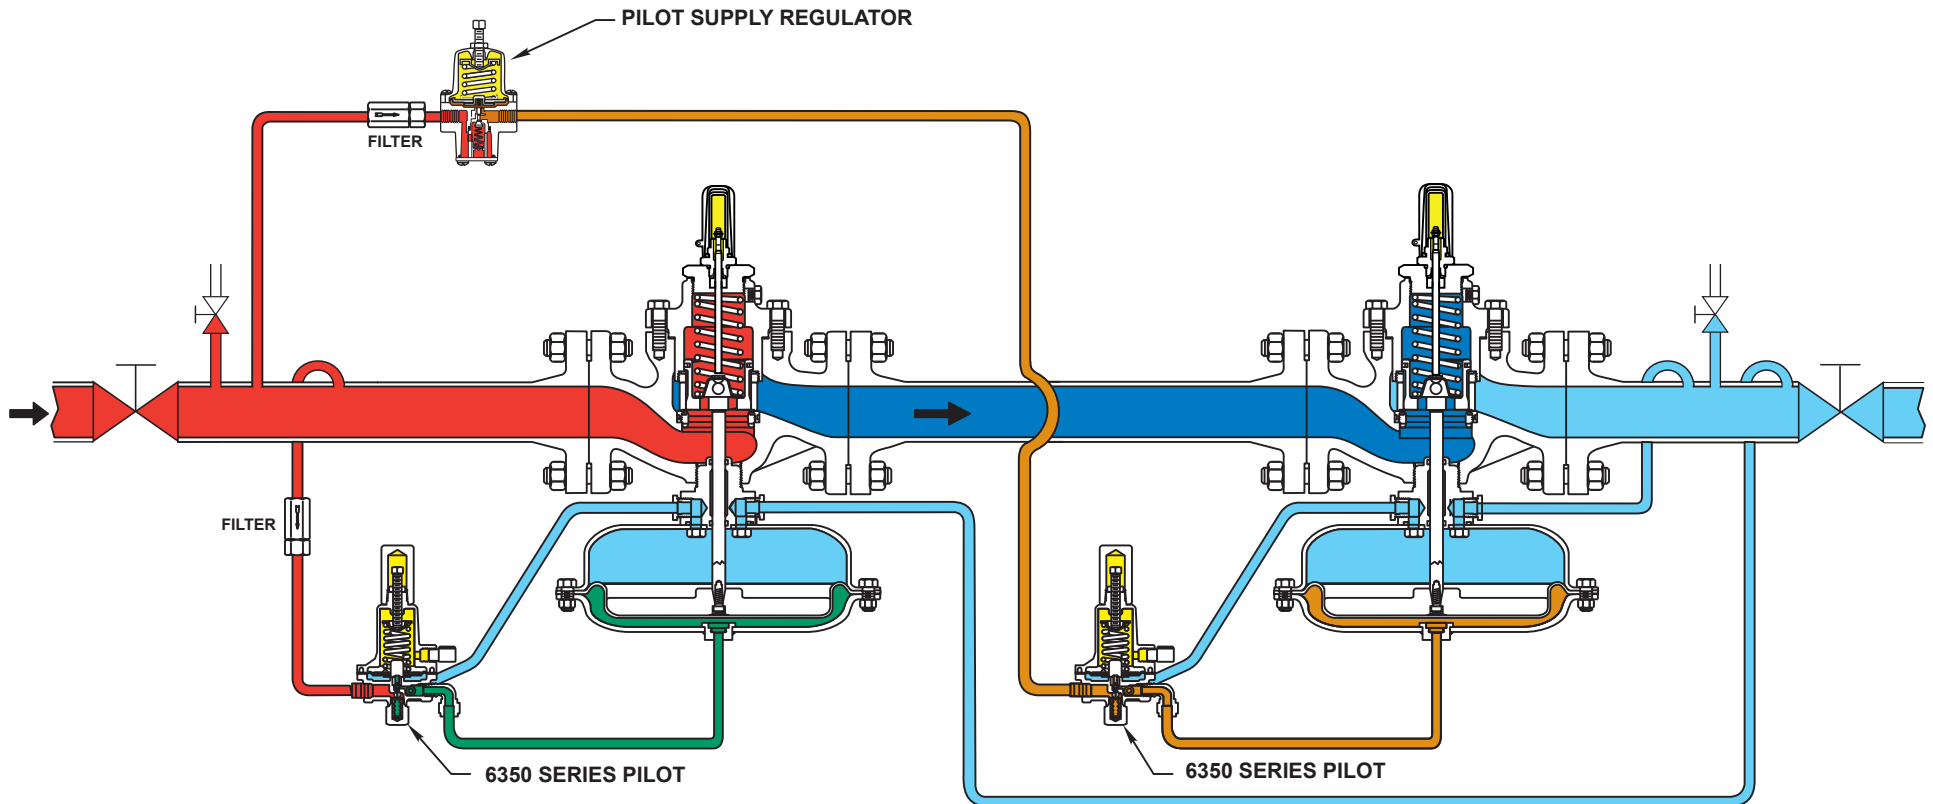

- INLET PRESSURE
- OUTLET PRESSURE
- LOADING PRESSURE
- PILOT SUPPLY PRESSURE
- ATMOSPHERIC PRESSURE
- INTERMEDIATE PRESSURE

