


Type FL Working Monitor

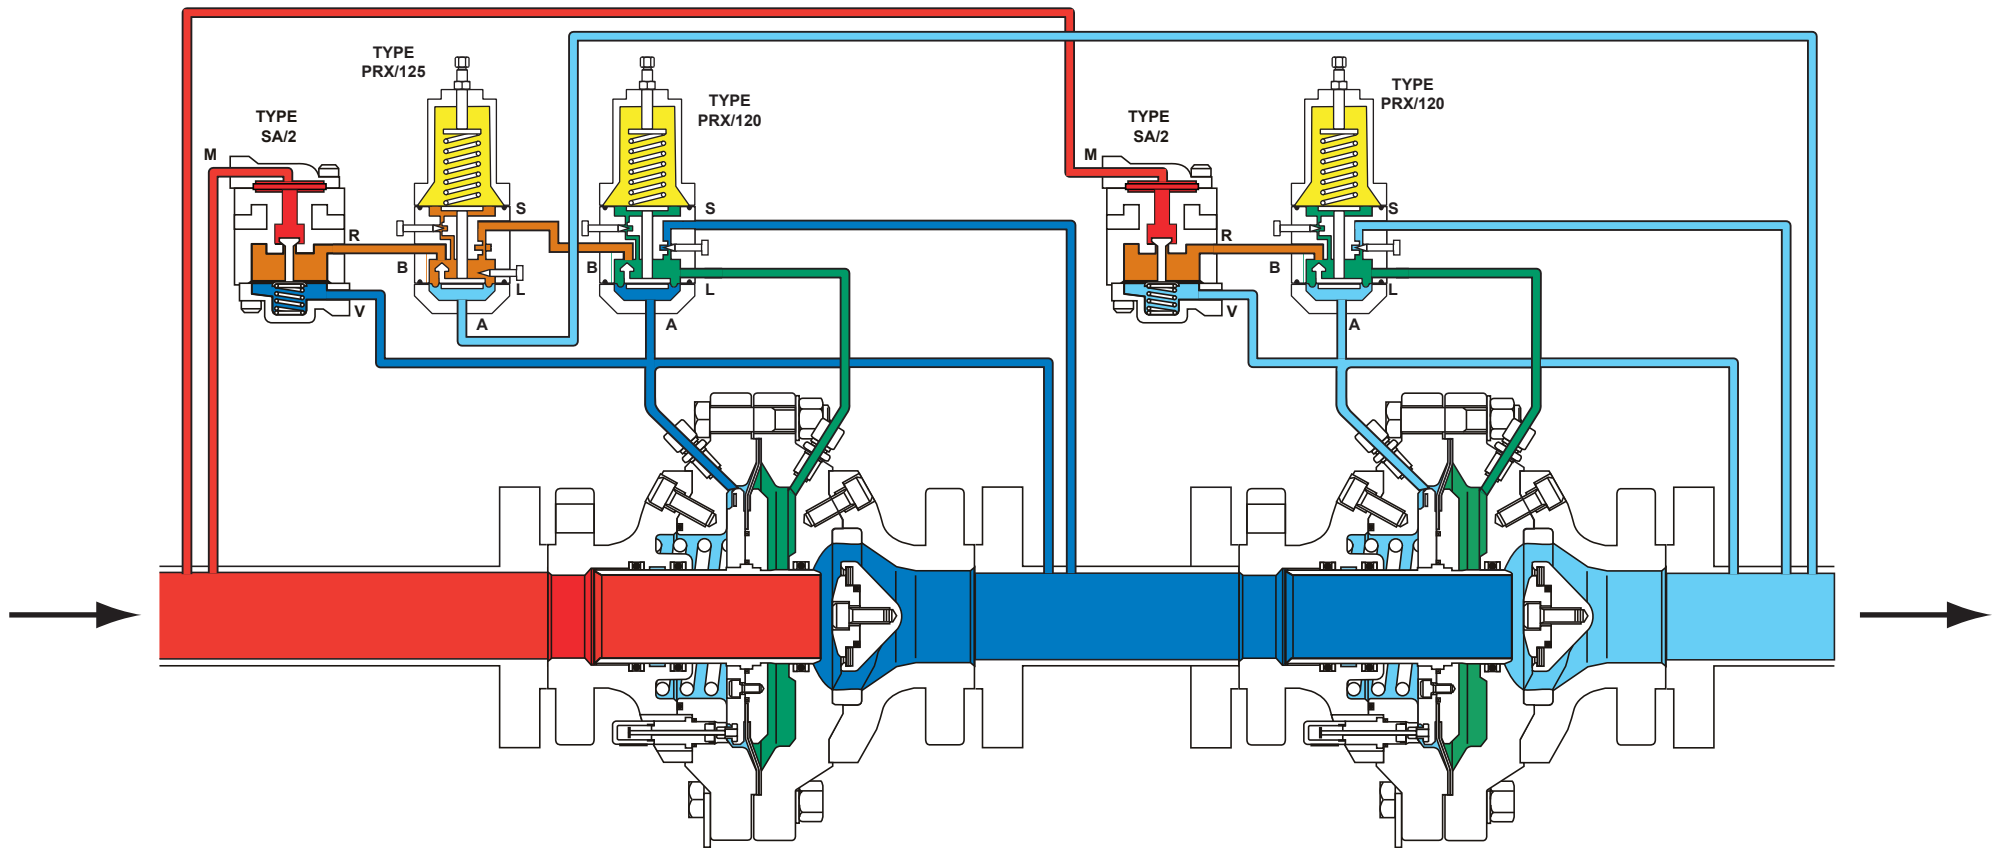

- INLET PRESSURE
- OUTLET PRESSURE
- ATMOSPHERIC PRESSURE
- LOADING PRESSURE
- PILOT SUPPLY PRESSURE
- INTERMEDIATE PRESSURE

