

Part Number D301217X012

July 2017

ROC800-Series Remote Operations Controller Instruction Manual



ROC809



ROC827

Revision Tracking Sheet

July 2017

This manual may be revised periodically to incorporate new or updated information. The revision date of each page appears at the bottom of the page opposite the page number. A change in revision date to any page also changes the date of the manual that appears on the front cover. Listed below is the revision date of each page (if applicable):

Page	Revision
All pages	July-2017
All pages	October-2016
All pages	January-2016
All pages	December-2015
All pages	July-2014
All pages	May-2013
All pages	November-2010
All pages	June-2009
Initial issue	March-2006

Contents

Chapter 1 – General Information	1-1
1.1 Scope of Manual	1-2
1.2 Series 1 versus Series 2 Architecture	1-3
1.3 Hardware	1-5
1.3.1 Central Processor Unit (CPU)	1-9
1.3.2 Real-Time Clock (RTC)	1-9
1.3.3 Diagnostic Monitoring	1-9
1.3.4 Options	1-10
1.4 FCC Information	1-11
1.5 Firmware	1-11
1.5.1 Historical Database and Event & Alarm Log	1-15
1.5.2 Meter Runs and Stations	1-16
1.5.3 ROC800 Flow Calculations	1-16
1.5.4 ROC800L Flow Calculations	1-17
1.5.5 Automatic Self Tests	1-17
1.5.6 Low Power Modes	1-18
1.5.7 Proportional, Integral, and Derivative (PID)	1-19
1.5.8 Function Sequence Table (FST)	1-19
1.6 ROCLINK 800 Configuration Software	1-20
1.7 ROC800L Software	1-22
1.8 DS800 Development Suite Software	1-23
1.9 Expansion Backplane	1-24
1.10 FOUNDATION™ Fieldbus Interface	1-24
1.11 Security Gateway	1-24
1.12 Additional Technical Information	1-25
Chapter 2 – Installation and Use	2-1
2.1 Installation Requirements	2-1
2.1.1 Environmental Requirements	2-2
2.1.2 Site Requirements	2-2
2.1.3 Compliance with Hazardous Area Standards	2-3
2.1.4 Power Installation Requirements	2-4
2.1.5 Grounding Installation Requirements	2-4
2.1.6 I/O Wiring Requirements	2-5
2.2 Required Tools	2-5
2.3 Housing	2-5
2.3.1 Removing and Replacing End Caps	2-6
2.3.2 Removing and Installing Wire Channel Covers	2-6
2.3.3 Removing and Installing Module Covers	2-7
2.4 Mounting the ROC800 on a DIN Rail	2-7
2.4.1 Installing the DIN Rail	2-9
2.4.2 Securing the ROC800 to the DIN Rail	2-9
2.4.3 Removing the ROC800 from the DIN Rail	2-10
2.5 ROC800-Series Expansion Backplane (EXP)	2-10
2.5.1 Attaching an Expansion Backplane	2-11
2.5.2 Removing an Expansion Backplane	2-12
2.6 Central Processing Unit (CPU)	2-13
2.6.1 Removing the CPU Module	2-17
2.6.2 Installing the CPU Module	2-17
2.7 License Keys	2-18

2.7.1	Installing a License Key	2-19
2.7.2	Removing a License Key	2-19
2.8	Startup and Operation	2-20
2.8.1	Startup	2-20
2.8.2	Operation	2-21

Chapter 3 – Power Connections **3-1**

3.1	Power Input Module Descriptions	3-1
3.1.1	12-Volt DC Power Input Module (PM-12)	3-1
3.1.2	24-Volt DC Power Input Module (PM-24)	3-3
3.1.3	30-Volt DC Power Input Module (PM-30)	3-4
3.1.4	Auxiliary Output (AUX+ and AUX-)	3-8
3.1.5	Switched Auxiliary Output (AUXSW+ and AUXSW-)	3-10
3.2	Determining Power Consumption	3-11
3.2.1	Tuning the Configuration	3-15
3.3	Removing a Power Input Module	3-25
3.4	Installing a Power Input Module	3-27
3.5	Connecting the ROC800 to Wiring	3-27
3.5.1	Wiring the DC Power Input Module	3-28
3.5.2	Wiring the External Batteries	3-29
3.5.3	Replacing the Internal Battery	3-30
3.6	Additional Technical Information	3-32

Chapter 4 – Input/Output Modules **4-1**

4.1	I/O Module Overview	4-1
4.2	Installation	4-4
4.2.1	Removing and Installing Wire Channel Covers	4-4
4.2.2	Removing and Installing Module Slot Covers	4-5
4.2.3	Installing an I/O Module	4-5
4.2.4	Removing an I/O Module	4-7
4.2.5	Wiring I/O Modules	4-7
4.3	Analog Input (AI) Modules	4-7
4.4	Analog Output (AO) Modules	4-9
4.5	Discrete Input (DI) Modules	4-10
4.6	Pulse Input (PI) Modules	4-12
4.7	Discrete Output (DO) Modules	4-13
4.8	Discrete Output Relay (DOR) Modules	4-15
4.9	Resistance Temperature Detector (RTD) Input Modules	4-16
4.10	Advanced Pulse Module (APM)	4-18
4.11	Multi-Variable Sensor Input/Output (MVS I/O)	4-21
4.12	Alternating Current Input/Output (AC I/O) Module	4-26
4.13	Thermocouple (TC) Input Module	4-28
4.14	Highway Addressable Remote Transducer (HART®) Module	4-32
4.15	IEC 62591 Module	4-34
4.16	APP 485 Module	4-36
4.17	Additional Technical Information	4-37

Chapter 5 – Communications **5-1**

5.1	Communication Ports and Modules Overview	5-1
5.2	Installing Communication Modules	5-3
5.3	Removing a Communication Module	5-5
5.4	Wiring Communication Modules	5-5
5.5	Local Operator Interface (LOI)	5-5

5.5.1	Using the LOI	5-7
5.6	Ethernet Communication.....	5-7
5.7	EIA-232 (RS-232) Serial Communication	5-9
5.8	EIA-422/485 (RS-422/485) Serial Communications Module	5-10
5.8.1	EIA-422/485 (RS-422/485) Jumpers & Termination Resistors	5-11
5.9	Dial-up Modem Communication Module	5-13
5.10	Multi-Variable Sensor (MVS) Interface Module	5-14
5.11	Network Radio Module (NRM)	5-14
5.12	Additional Technical Information.....	5-16

Chapter 6 – Troubleshooting **6-1**

6.1	Guidelines	6-1
6.2	Checklists	6-2
6.2.1	Serial Communications	6-2
6.2.2	I/O Point	6-3
6.2.3	Software	6-3
6.2.4	Powering Up.....	6-4
6.2.5	MVS or MVS I/O Module.....	6-4
6.2.6	IEC 62591 Module	6-5
6.3	Procedures.....	6-5
6.3.1	Preserving Configuration and Log Data	6-5
6.3.2	Restarting the ROC800.....	6-5
6.3.3	Troubleshooting Analog Input Modules	6-6
6.3.4	Troubleshooting Analog Output Modules.....	6-8
6.3.5	Troubleshooting Discrete Input Modules	6-9
6.3.6	Troubleshooting Discrete Output Modules.....	6-9
6.3.7	Troubleshooting Discrete Output Relay Modules	6-10
6.3.8	Troubleshooting Pulse Input Modules.....	6-10
6.3.9	Troubleshooting RTD Input Modules	6-11
6.3.10	Troubleshooting Thermocouple Input (T/C) Modules	6-12
6.3.11	Troubleshooting Advanced Pulse Modules.....	6-14
6.3.12	Network Radio Modules	6-14

Chapter 7 – Calibration **7-1**

7.1	Calibration Overview	7-1
7.2	Calibration Frequency	7-1
7.3	Preparing for Calibration	7-2

Appendix A – Glossary **A-1**

Appendix B – Wiring Diagrams **B-1**

B.1	Daniel Senior Sonic Meter to PI Module	B-1
B.2	Daniel 1818A and 1838 Turbine Pre-Amp to PI Module.....	B-2
B.3	Micro Motion RFT9739 & 2400S Transmitters to PI Module	B-3
B.4	Micro Motion RFT9739 & 2400S Transmitters to APM Module	B-4
B.5	3- and 4-Wire RTD to RTD Module.....	B-5
B.6	Daniel Senior Sonic Meter to APM Module.....	B-6
B.7	Daniel 1818A and 1838 Dual Turbine Pre-Amp to APM Module	B-7
B.8	Daniel 1818A and 1838 Turbine Pre-Amp to APM Module	B-8
B.9	Two-Stage Valve with Two Limit Switches to ACIO Module.....	B-9

