

Part Number D301273X012

Form A6162

November 2016

ROC Keypad Display Program User Manual (for ROC800-Series Remote Operations Controllers)



Revision Tracking Sheet

November 2016

This manual may be revised periodically to incorporate new or updated information. The revision date of each page appears at the bottom of the page opposite the page number. A change in revision date to any page also changes the date of the manual that appears on the front cover. Listed below is the revision date of each page (if applicable):

Page	Revision
All Pages	November-2016
All Pages	June-2007
Initial release	June-2004

Contents

Chapter 1 – Introduction	1
1.1 Scope and Organization.....	1
1.2 Hardware Overview.....	1
1.3 Product Overview.....	2
1.4 Program Requirements.....	2
Chapter 2 – Installation	3
2.1 Installing the Keypad Display.....	3
2.1.1 Mounting the Keypad Display.....	3
2.1.2 Installing the Visor.....	6
2.1.3 Wiring the Keypad Display for Power.....	7
2.1.4 Wiring the Keypad Display for Communications.....	9
2.2 Downloading the Program.....	10
2.3 MPU Loading Threshold.....	13
Chapter 3 – Configuration	15
3.1 Device Information Keypad Display Tab.....	16
3.2 Comm Port General Tab.....	17
3.3 Saving the Configuration.....	19
Chapter 4 – Reference	21
4.1 Operating the Keypad Display.....	21
4.1.1 Logging In.....	22
4.1.2 Accessing the Main Menu and Other Menus.....	23
4.1.3 Logging Out.....	27
4.2 Point Type 236: Display Configuration.....	28
Appendix A – ROC800 Keypad Display Pattern	29

[This page is intentionally left blank.]