

ATEX Instruction Sheet

Part Number: ATEX142

Publish date: March, 2014

Ethernet I/O Card

KL2001X1-BD1

Hazardous Atmosphere



II 3G nA IIC Gc
FM12ATEX0089U
IECEX FMG 12.0036U

Power Specifications

Input power redundant +24 VDC at 1A

Environmental Specifications

Ambient Temperature	-40 to 70° C
Shock	10g ½ Sinewave for 11 msec
Vibration	1mm Peak to Peak from 2 to 13.2Hz; 0.7g from 13.2 to 150Hz
Airborne Contaminants	ISA-S71.04 –1985 Airborne Contaminants Class G3
Relative Humidity	5 to 95% Non-Condensing IP 20 Rating
Terminal block key position	Automatically set during installation

Note: Refer to the product label for serial number and location and date of manufacture.

Warning: This product has specific instructions for installation, removal and operation in hazardous areas. Refer to document 12P5403 "*DeltaV™ Electronic Marshalling Digital Automation System (CHARM I/O Subsystem) Zone 2 Installation Instructions*". Other installation instructions are available in the "*DeltaV™ S-series and CHARMs Hardware Installation*" manual.

Removal and Insertion

This unit cannot be removed or inserted with system power energized.

Ethernet I/O Card

Maintenance and Adjustment

This unit contains no user serviceable parts and should not be disassembled for any reason. Calibration is not required.

Other Safety Approvals



CL. 1 Div. 2
GP. A,B,C,D
HAZ. LOC.
TEMP. Rating T4

