

HART® SMART Two-Wire Contacting Conductivity Transmitter

For additional information, please refer to the Instruction Manuals CD shipped with this product, or visit our website at www.emersonprocess.com/raihome/liquid/.

ESSENTIAL INSTRUCTIONS

READ THIS PAGE BEFORE PROCEEDING!

Your purchase from Rosemount Analytical, Inc. has resulted in one of the finest instruments available for your particular application. These instruments have been designed, and tested to meet many national and international standards. Experience indicates that its performance is directly related to the quality of the installation and knowledge of the user in operating and maintaining the instrument. To ensure their continued operation to the design specifications, personnel should read this manual thoroughly before proceeding with installation, commissioning, operation, and maintenance of this instrument. If this equipment is used in a manner not specified by the manufacturer, the protection provided by it against hazards may be impaired.

- Failure to follow the proper instructions may cause any one of the following situations to occur: Loss of life; personal injury; property damage; damage to this instrument; and warranty invalidation.
- Ensure that you have received the correct model and options from your purchase order. Verify that this manual covers your model and options. If not, call 1-800-854-8257 or 949-757-8500 to request correct manual.
- For clarification of instructions, contact your Rosemount representative.
- Follow all warnings, cautions, and instructions marked on and supplied with the product.
- Use only qualified personnel to install, operate, update, program and maintain the product.
- Educate your personnel in the proper installation, operation, and maintenance of the product.
- Install equipment as specified in the Installation section of this manual. Follow appropriate local and national codes. Only connect the product to electrical and pressure sources specified in this manual.
- Use only factory documented components for repair. Tampering or unauthorized substitution of parts and procedures can affect the performance and cause unsafe operation of your process.
- All equipment doors must be closed and protective covers must be in place unless qualified personnel are performing maintenance.
- If this equipment is used in a manner not specified by the manufacturer, the protection provided by it against hazards may be impaired.

WARNING

EXPLOSION HAZARD
DO NOT OPEN WHILE CIRCUIT IS LIVE
DO NOT RUB OR CLEAN WITH SOLVENTS
9241589-00/A

CAUTION

If a Model 375 Universal Hart® Communicator is used with these transmitters, the software within the Model 375 may require modification.
If a software modification is required, please contact your local Emerson Process Management Service Group or National Response Center at 1-800-654-7768.

SPECIFICATIONS - GENERAL

Case: ABS. Pipe, surface, and panel mount versions are NEMA 4X/CSA 4 (IP65).

Dimensions

Panel (code -10): 6.10 x 6.10 x 3.72 in. (155 x 155 x 94.5 mm)

Surface/Pipe (code -11): 6.23 x 6.23 x 3.23 in. (158 x 158 x 82 mm)

Conduit openings: Accepts PG13.5 or 1/2 in. conduit fittings

Ambient Temperature: 32 to 122°F (0 to 50°C). Some degradation of display above 50°C.

Storage Temperature: -4 to 158°F (-20 to 70°C)

Relative Humidity: 10 to 90% (non-condensing)

Weight/Shipping Weight: 3 lb/4 lb (1.5 kg/2.0 kg)

Display: Two line, 16-character display. Character height: 4.8 mm; first line shows process variable, second line shows process temperature and output current. Fault and warning messages, when triggered, alternate with temperature and output readings.

During calibration and programming, messages, prompts, and editable values appear on the two-line display.

Temperature resolution: 0.1°C (≤99.9°C); 1°C (≥100°C)

RFI/EMI: EN-61326 **CE**

HAZARDOUS LOCATION APPROVALS

Intrinsic Safety:



Class I, II, III, Div. 1
Groups A-G
T4 Tamb = 50°C



Class I, II, III, Div. 1
Groups A-G
T4 Tamb = 50°C

ATEX

CE 1180

II 1 G

Baseefa04ATEX0214X

EEx ia IIC T4

Tamb = 0°C to 50°C



Non-Incendive:




Class I, Div. 2, Groups A-D
Dust Ignition Proof
Class II & III, Div. 1, Groups E-G
NEMA 4/4X Enclosure



Class I, Div. 2, Groups A-D
Dust Ignition Proof
Class II & III, Div. 1, Groups E-G
NEMA 4/4X Enclosure
T4 Tamb = 50°C

HART —

Power & Load Requirements: Supply voltage at the transmitter terminals should be at least 12 Vdc. Power supply voltage should cover the voltage drop on the cable plus the external load resistor required for HART communications (250 Ω minimum). Minimum power supply voltage is 12 Vdc. Maximum power supply voltage is 42.4 Vdc (30 Vdc for intrinsically safe operation). The graph below shows the supply voltage required to maintain 12 Vdc (upper line) and 30 Vdc (lower line) at the transmitter terminals when the current is 22 mA.

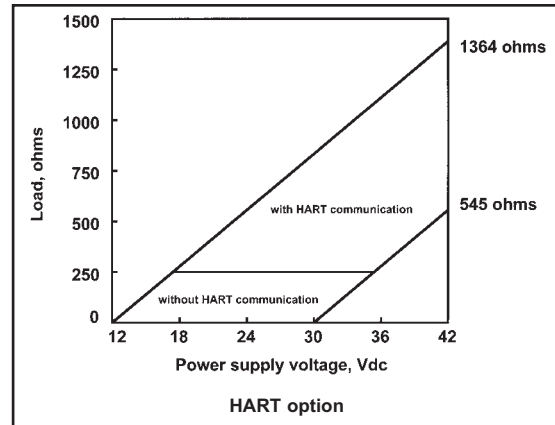

Analog Output: Two-wire, 4-20 mA output with superimposed HART digital signal. Fully scalable over the operating range of the sensor.

Output accuracy: ±0.05 mA

FUNCTIONAL SPECIFICATIONS

Automatic Temperature Compensation:

3-wire Pt 100 or Pt 1000 RTD

Conductivity: 0 to 200°C (32 to 392°F)

Resistivity: 0 to 100°C (32 to 212°F)

Low Conductivity: 0 to 100°C (32 to 212°F)

Diagnostics: The internal diagnostics can detect:

Calibration Error	ROM Failure
Temperature Slope Error	Zero Error
High Temperature Warning	CPU Failure
Low Temperature Warning	Input Warning

Once one of the above is diagnosed, the Xmt-C will display a message describing the problem.

DIGITAL COMMUNICATIONS:

HART: PV, SV, and TV assignable to measurement (conductivity, resistivity, or concentration), temperature, and raw conductivity. Raw conductivity is measured conductivity before temperature correction.

TRANSMITTER SPECIFICATIONS @ 25°C

Measured Range: 0-20,000 $\mu\text{S/cm}$

Accuracy: $\pm 0.7\%$ of reading and $\pm 0.002 \mu\text{S/cm}$

Repeatability: $\pm 0.25\%$ of reading

Temperature Accuracy: $\pm 0.2^\circ\text{C}$ between 0 and 50°C ;
 $\pm 0.5^\circ\text{C}$ above 50°C (excludes inaccuracies in sensor)

Temperature Compensation: Slope 0-5%/°C, ultra-pure water, cation conductivity, or raw (uncompensated) conductivity.

Compatible RTD: 100 Ω or 1000 Ω with automatic recognition

Ambient Temperature Coefficient:

$\pm 0.05\%$ of reading/°C

Maximum Cable Length: 200 ft (61 m)

LOOP SPECIFICATIONS

Accuracy: under controlled laboratory conditions at 25°C (77°F) with perfectly calibrated ENDURANCE sensor of appropriate cell constant:

Cell Constant	Range	Loop accuracy
0.01/cm	up to 50 $\mu\text{S/cm}$	$\pm 0.7\%$ of reading $\pm 0.002 \mu\text{S/cm}$
0.1/cm	0.4 to 50 $\mu\text{S/cm}$ 50 to 200 $\mu\text{S/cm}$	$\pm 0.7\%$ of reading $\pm 2\%$ of reading
1.0/cm	4 to 5000 $\mu\text{S/cm}$ 5000 to 20,000 $\mu\text{S/cm}$	$\pm 0.7\%$ of reading $\pm 2\%$ of reading

Calibration: Calibrate against previously calibrated standard sensor and analyzer, or calibrate against solution of known conductivity.

SENSOR SELECTION GUIDELINES

Cell Constant	Suggested Conductivity Range
0.01/cm	up to 50 $\mu\text{S/cm}$
0.1/cm	0.4 to 500 $\mu\text{S/cm}$
1.0/cm	4 to 20,000 $\mu\text{S/cm}$

Note: The conductivity values shown in the above chart are for UNCOMPENSATED (or RAW) conductivity at 25°C. Maximum range values will vary due to temperature compensation selection, process temperature, and other process conditions.

RECOMMENDED SENSORS:

Model 140	Retractable Conductivity
Model 141	Insertion High Conductivity
Model 142	Insertion Low Conductivity
Model 150	Insertion/Submersion Conductivity
Model 400	Screw-In Low Conductivity
Model 400VP	Screw-In Low Conductivity
Model 401	Screw-In High Conductivity
Model 402	Retractable Conductivity
Model 402VP	Retractable Conductivity
Model 403	Sanitary Conductivity
Model 403VP	Sanitary Conductivity
Model 404	Low Flow Conductivity

Specifications subject to change without notice.

QUICK START GUIDE

FOR MODEL SOLU COMP Xmt-C-HT TRANSMITTER

1. Refer to page 5 for installation instructions.
2. Wire conductivity sensor to the transmitter. Refer to the sensor instruction sheet for details.
3. Once connections are secure and verified, apply DC power to the transmitter.
4. When the transmitter is powered up for the first time, **Quick Start** screens appear. Using **Quick Start** is easy.
 - a. A blinking field shows the position of the cursor.
 - b. Use the ◀ or ▶ key to move the cursor left or right. Use the ▲ or ▼ key to move the cursor up or down or to increase or decrease the value of a digit. Use the ▲ or ▼ key to move the decimal point.
 - c. Press ENTER to store a setting. Press EXIT to leave without storing changes. Pressing EXIT also returns the display to the previous screen.

```
English      Français
Español      >>
```

5. Choose the desired language. Choose >> to show more choices.

```
Measure?      Cond
Resistivity    >>
```

6. Choose measurement: **Conductivity, Resistivity, Total Dissolved Solids, or Custom.**

```
Measure?
TDS          Custom >>
```

```
Cell Constant?
1.0000/cm
```

7. Enter the cell constant. See label attached to sensor.

```
ROSEMOUNT ANALYTICAL | ENDURANCE™ CONDUCTIVITY SENSOR
MODEL/PN: 404-11-16-50-54   REV B   C99   PT1000
MAX TEMP: 140°F AT 20 psig  CAL CONST= 450   K= .01
MAX PRESS: 100 psig AT 77°F  CELL CONST= .00950/cm
```

If there is no cell constant on the label, calculate it from the equation:

$$\text{cell const} = K \left(\frac{500 + \text{cal const}}{1000} \right)$$

```
Temperature in?
°C              °F
```

8. Choose temperature units: °C or °F.

```
Enter Data Pts
Ref Temp      Slope
```

9. If you selected **Custom**, you must enter the appropriate conductivity and concentration data points. From the main display, press MENU. Choose **Program** followed by **Measurement** and **Custom**. The screen shown at left appears. Select **Enter Data Pts**. Follow the prompts and enter the display units, the number of data points, and enter the concentration and conductivity data points. Enter the reference temperature and the temperature coefficient (slope). Once the analyzer has been configured, press EXIT. For a guide to the program menu, see the menu tree on page 16.

```
Concentration
Units?      %   PPM   none
```

10. To change output settings, to scale the 4-20 mA output, to change measurement-related settings from the default values, and to set security codes, press MENU. Select Program and follow the prompts. Refer to the menu tree on page 16.

11. To return the transmitter to default settings, choose **ResetAnalyzer** in the Program menu.

UNPACKING AND INSPECTION


Inspect the shipping container. If it is damaged, contact the shipper immediately for instructions. Save the box. If there is no apparent damage, unpack the container. Be sure all items shown on the packing list are present. If items are missing, notify Emerson Process Management immediately.

INSTALLATION

1. Although the transmitter is suitable for outdoor use, do not install it in direct sunlight or in areas of extreme temperatures.
2. Install the transmitter in an area where vibrations and electromagnetic and radio frequency interference are minimized or absent.
3. Keep the transmitter and sensor wiring at least one foot from high voltage conductors. Be sure there is easy access to the transmitter.
4. The transmitter is suitable for panel (Figure 1), pipe (Figure 2), or surface (Figure 3) mounting.
5. The transmitter case has two 1/2-inch (PG13.5) conduit openings and either one or four 1/2-inch knockouts. The panel mount Xmt-C-HT has four knockouts. The pipe/surface mount transmitter has one knockout. One conduit opening is for the power/output cable; the other opening is for the sensor cable. The knockout should be removed only if a second sensor is required, i.e., if free chlorine with continuous pH correction is being measured.
6. Use weathertight cable glands to keep moisture out to the transmitter. If conduit is used, plug and seal the connections at the transmitter housing to prevent moisture from getting inside the instrument.
7. To reduce the likelihood of stress on wiring connections, do not remove the hinged front panel (-11 models) from the base during wiring installation. Allow sufficient wire leads to avoid stress on conductors.


NOTE: Use Stiffner 32939-00 provided in Kit 24062-00 to electrically bond enclosure to Earth Ground.

The figure to the right shows how to remove the knockouts. The knockout grooves are on the outside of the case. Place the screwdriver blade on the inside of the case and align it approximately along the groove. Rap the screwdriver sharply with a hammer until the groove cracks. Move the screwdriver to an uncracked portion of the groove and continue the process until the knockout falls out. Use a small knife blade to remove the flash from the inside of the hole.

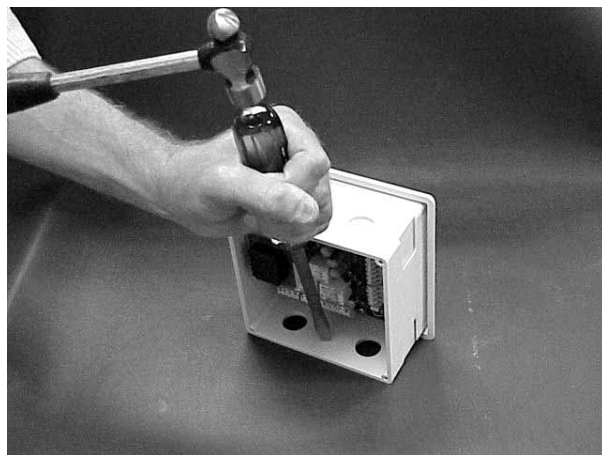


Removing the Knockouts


Panel Mounting.

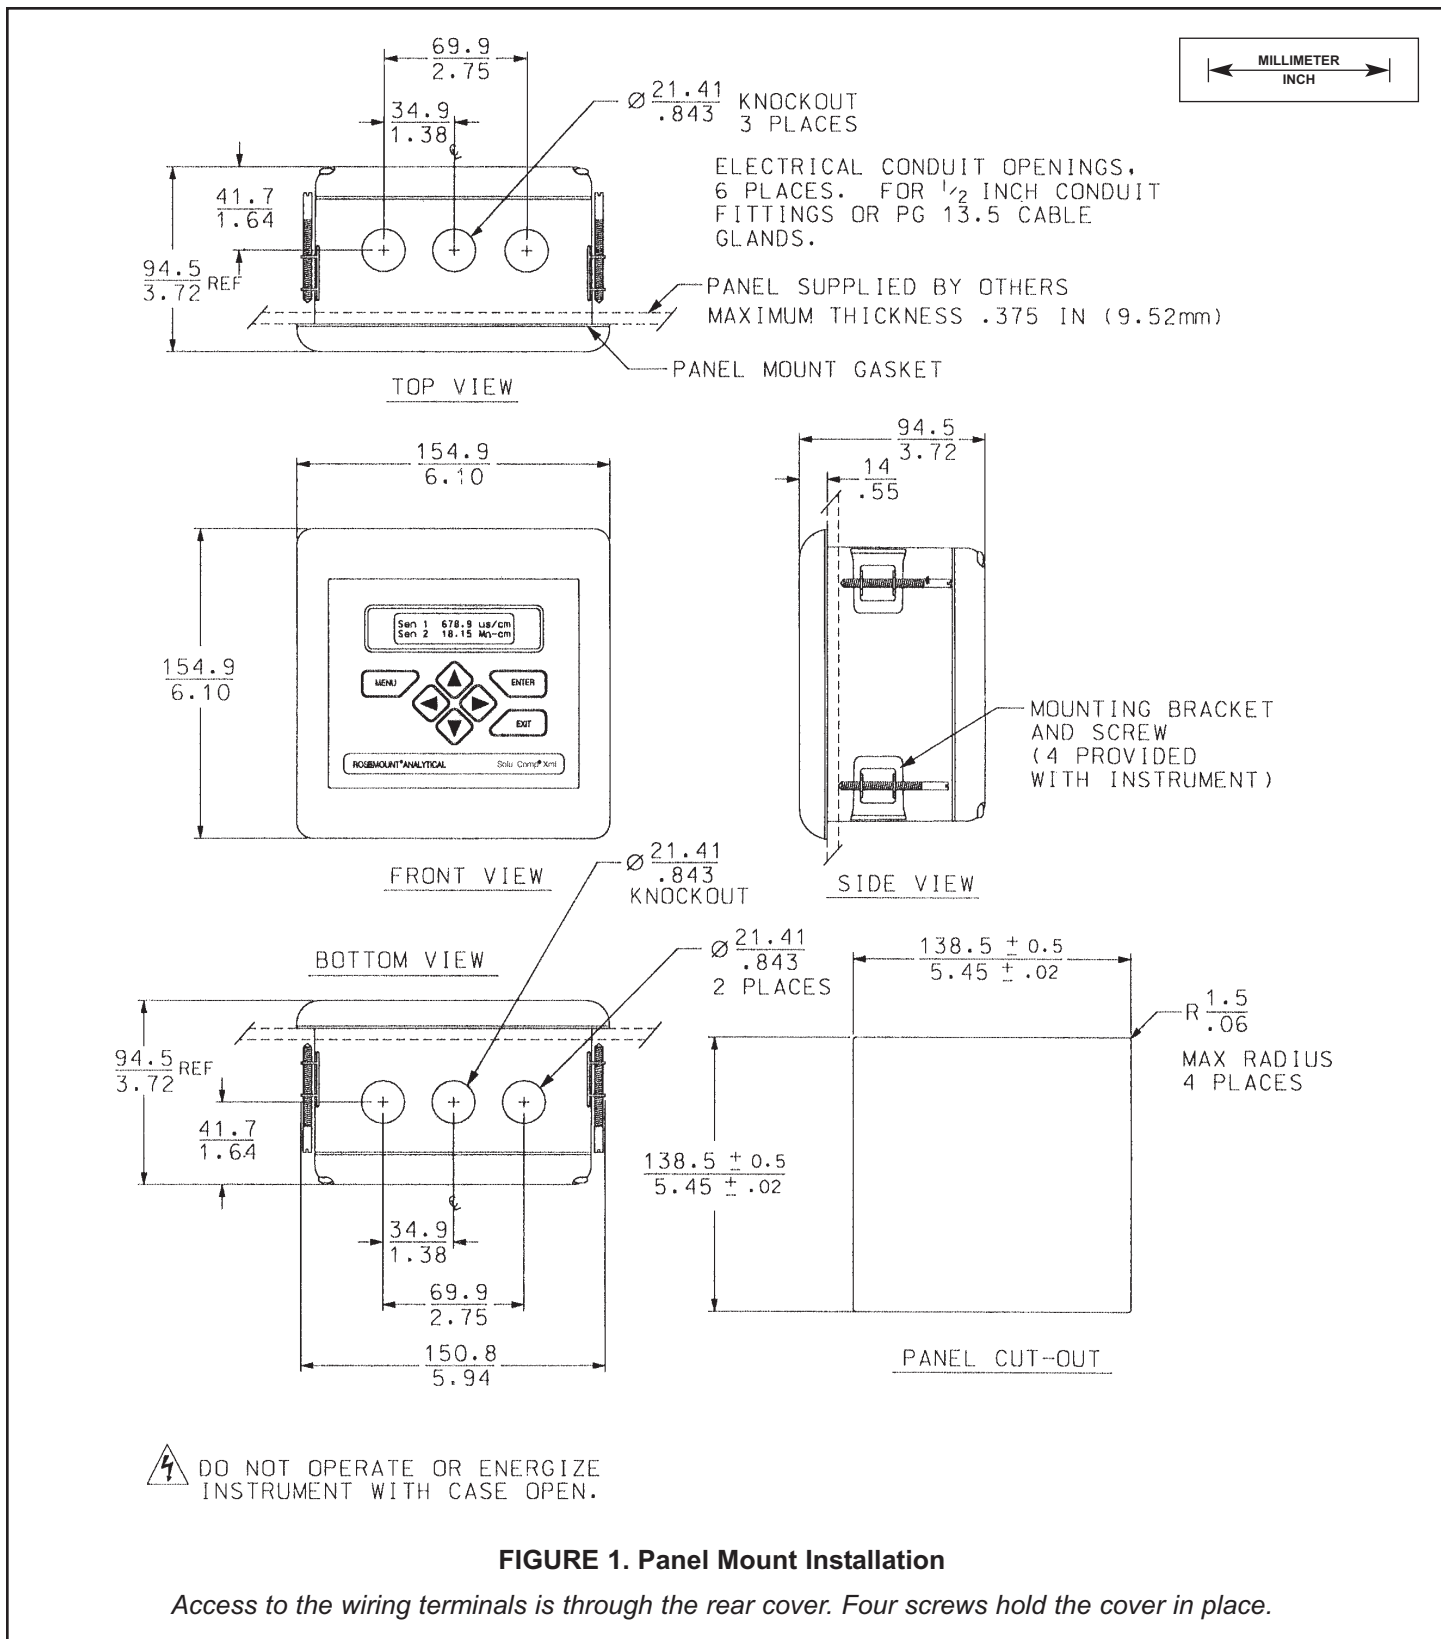


Pipe Mounting.

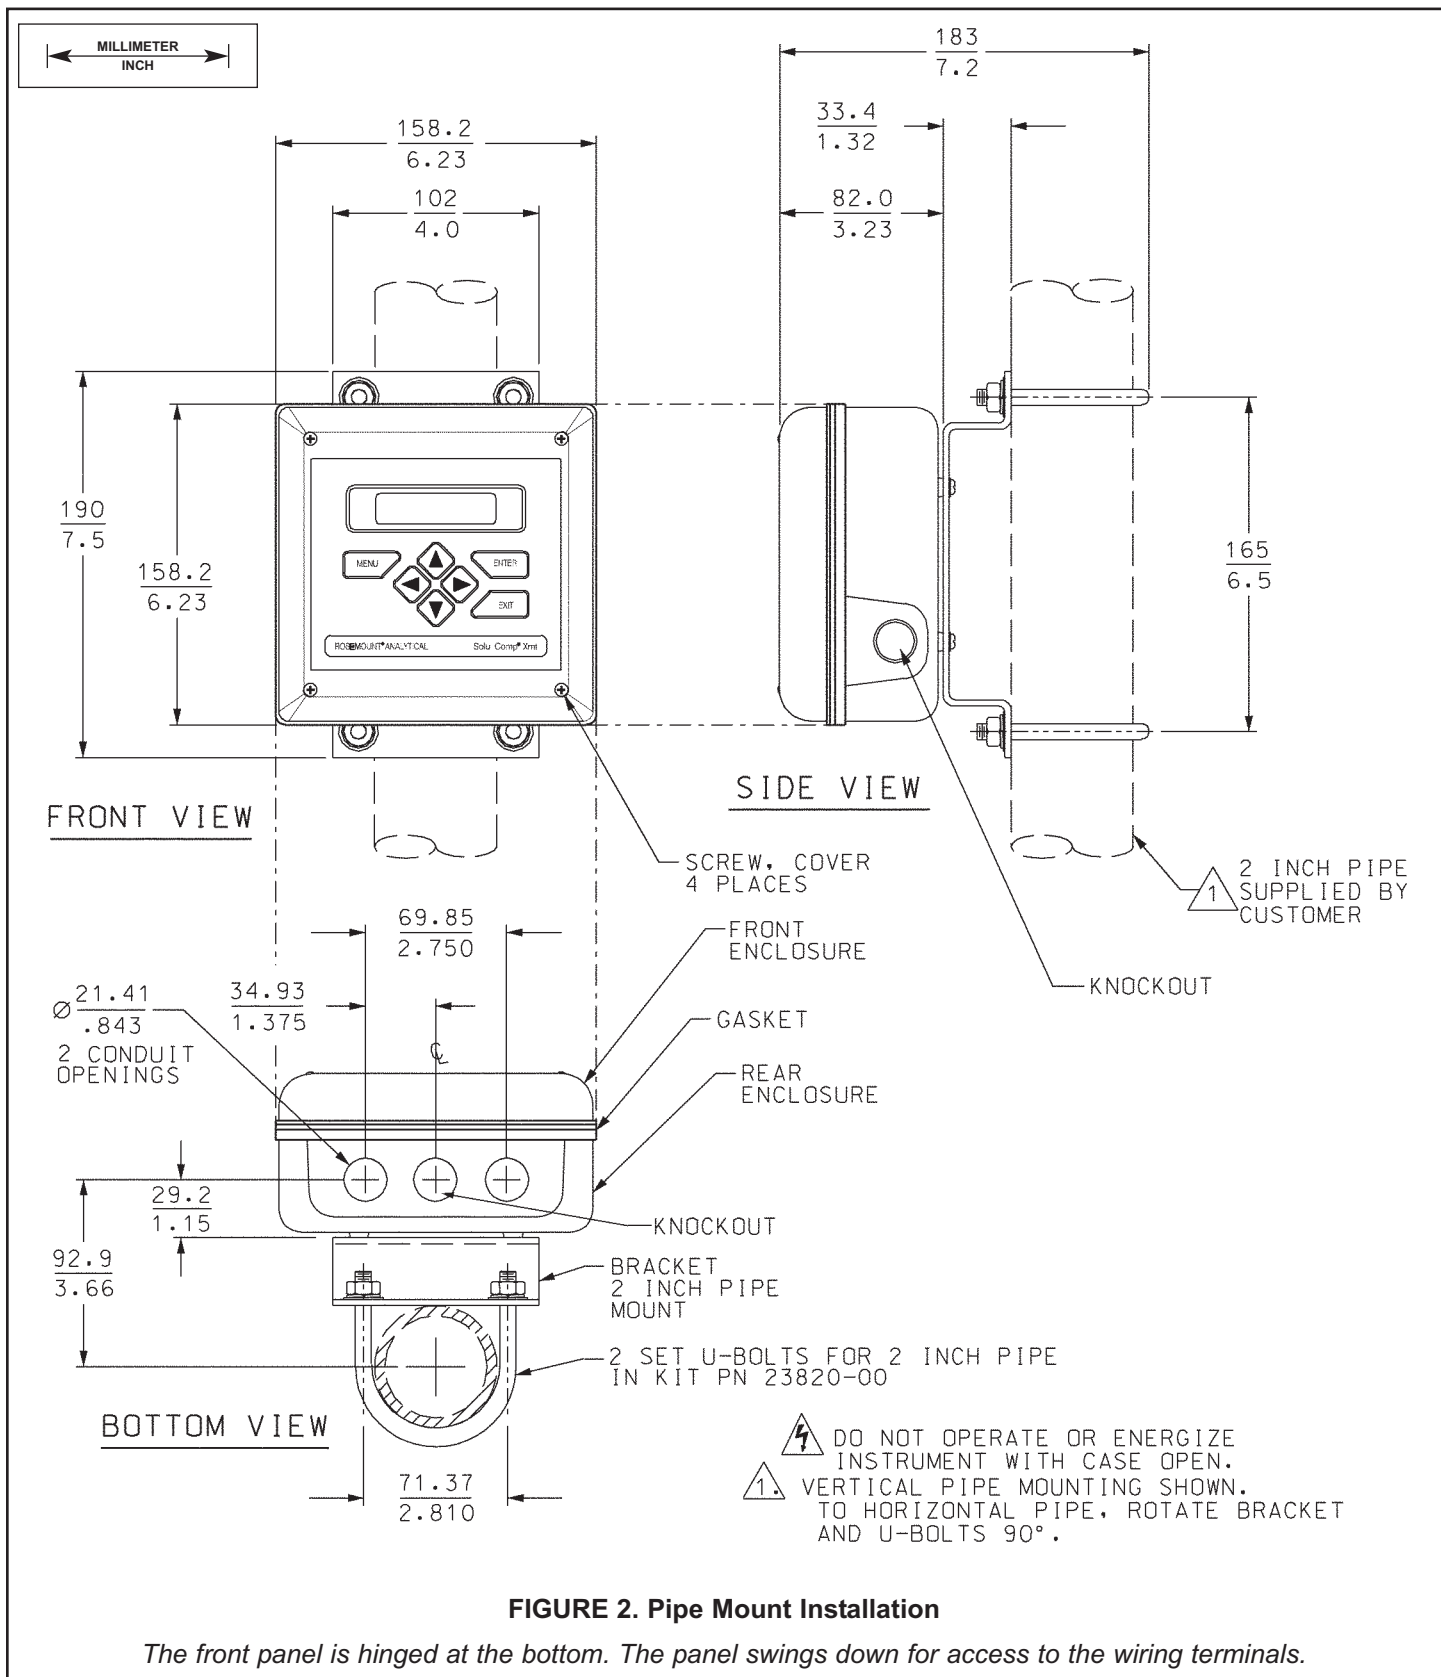


Surface Mounting.

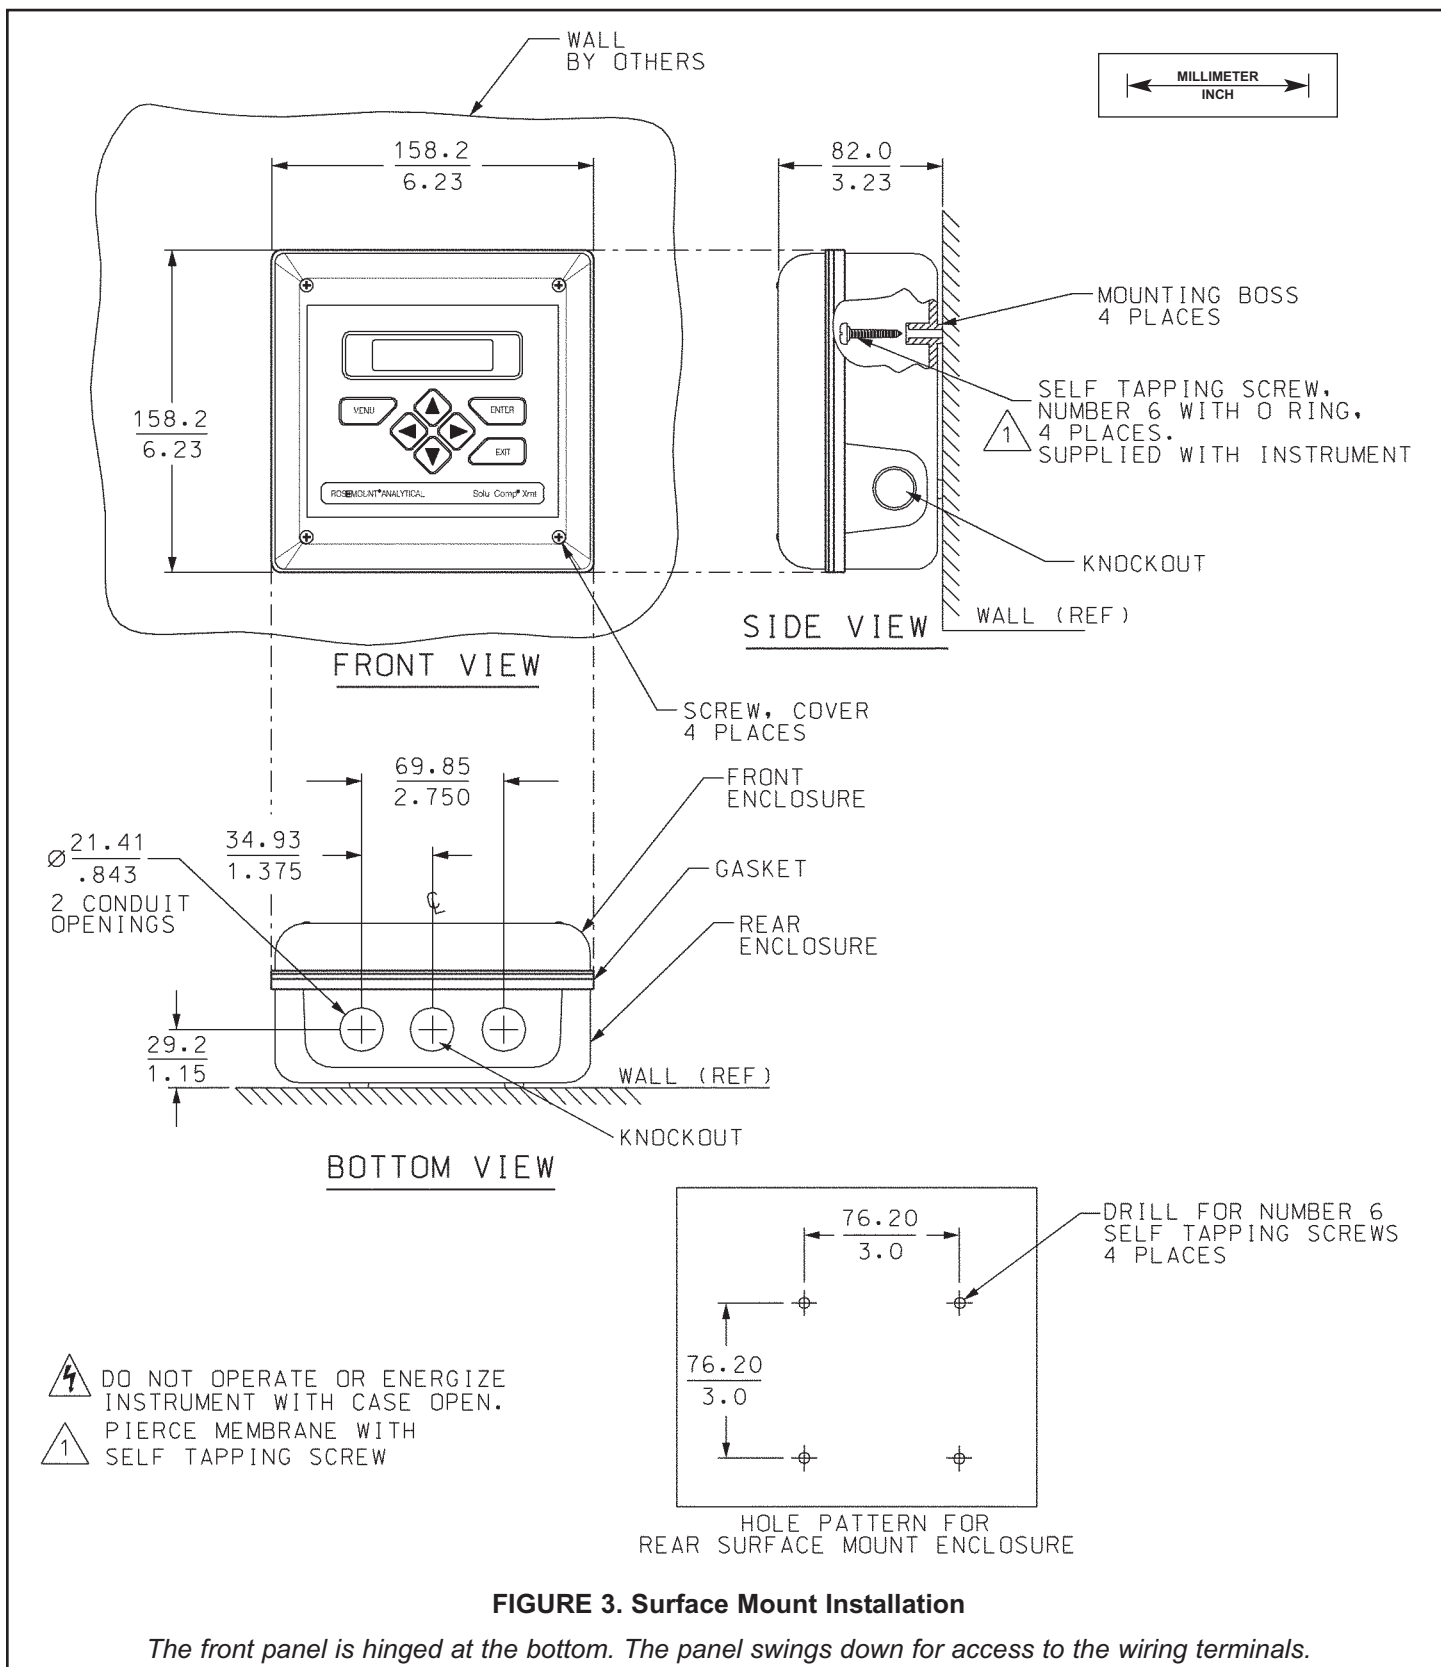

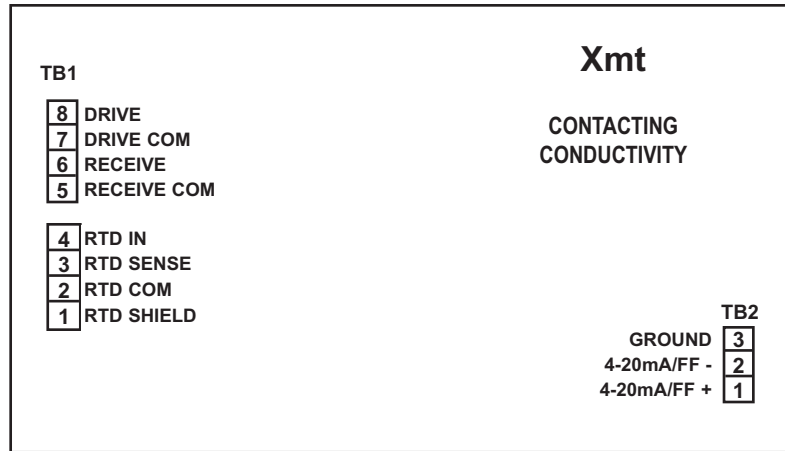

PANEL MOUNT

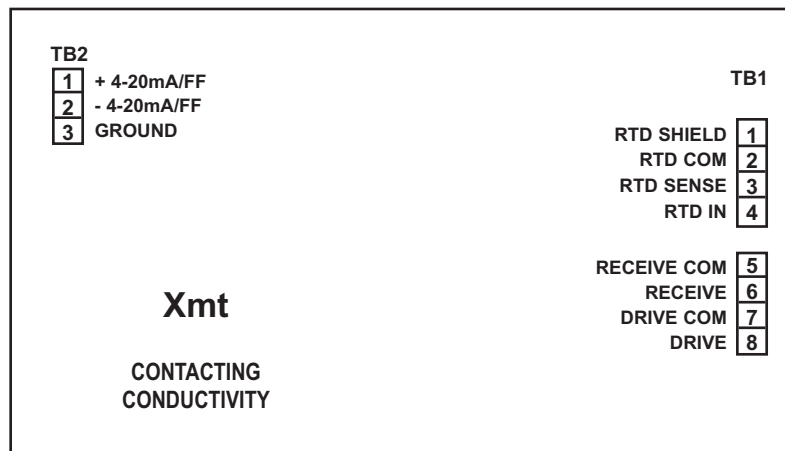

PIPE/SURFACE MOUNT

FIGURE 5. Loop Power and Sensor Wiring

HAZARDOUS AREA INSTALLATION

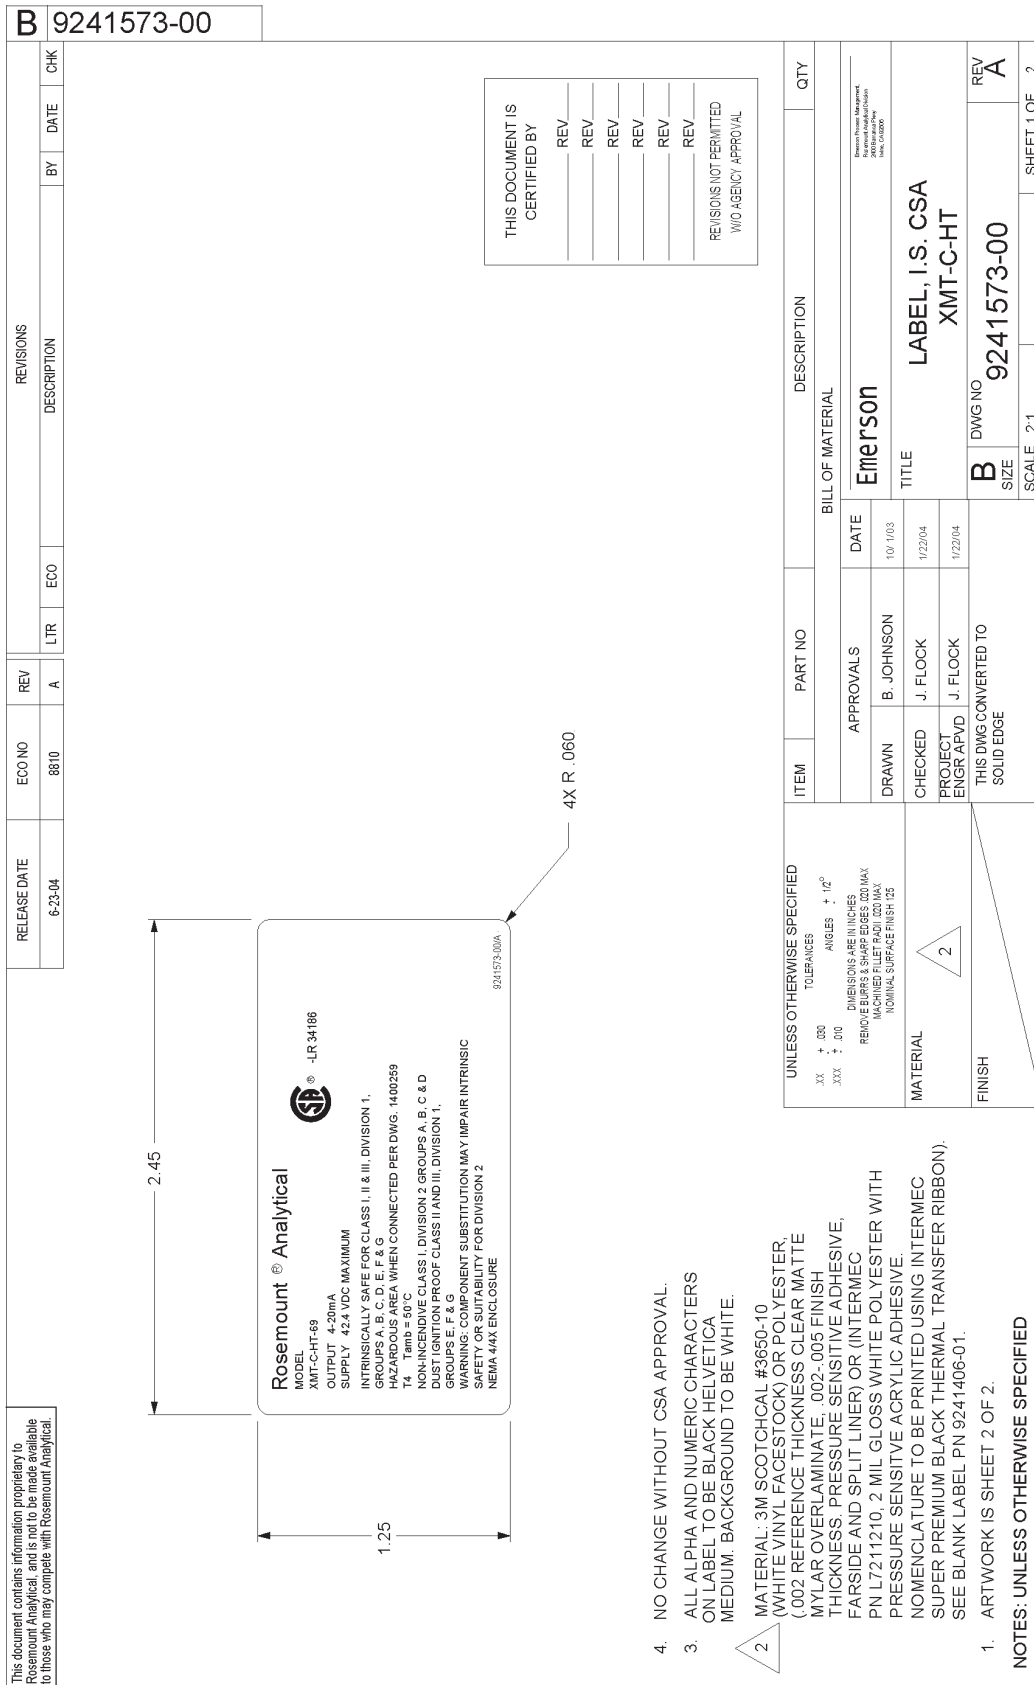


FIGURE 6. CSA Intrinsically Safe Installation Label

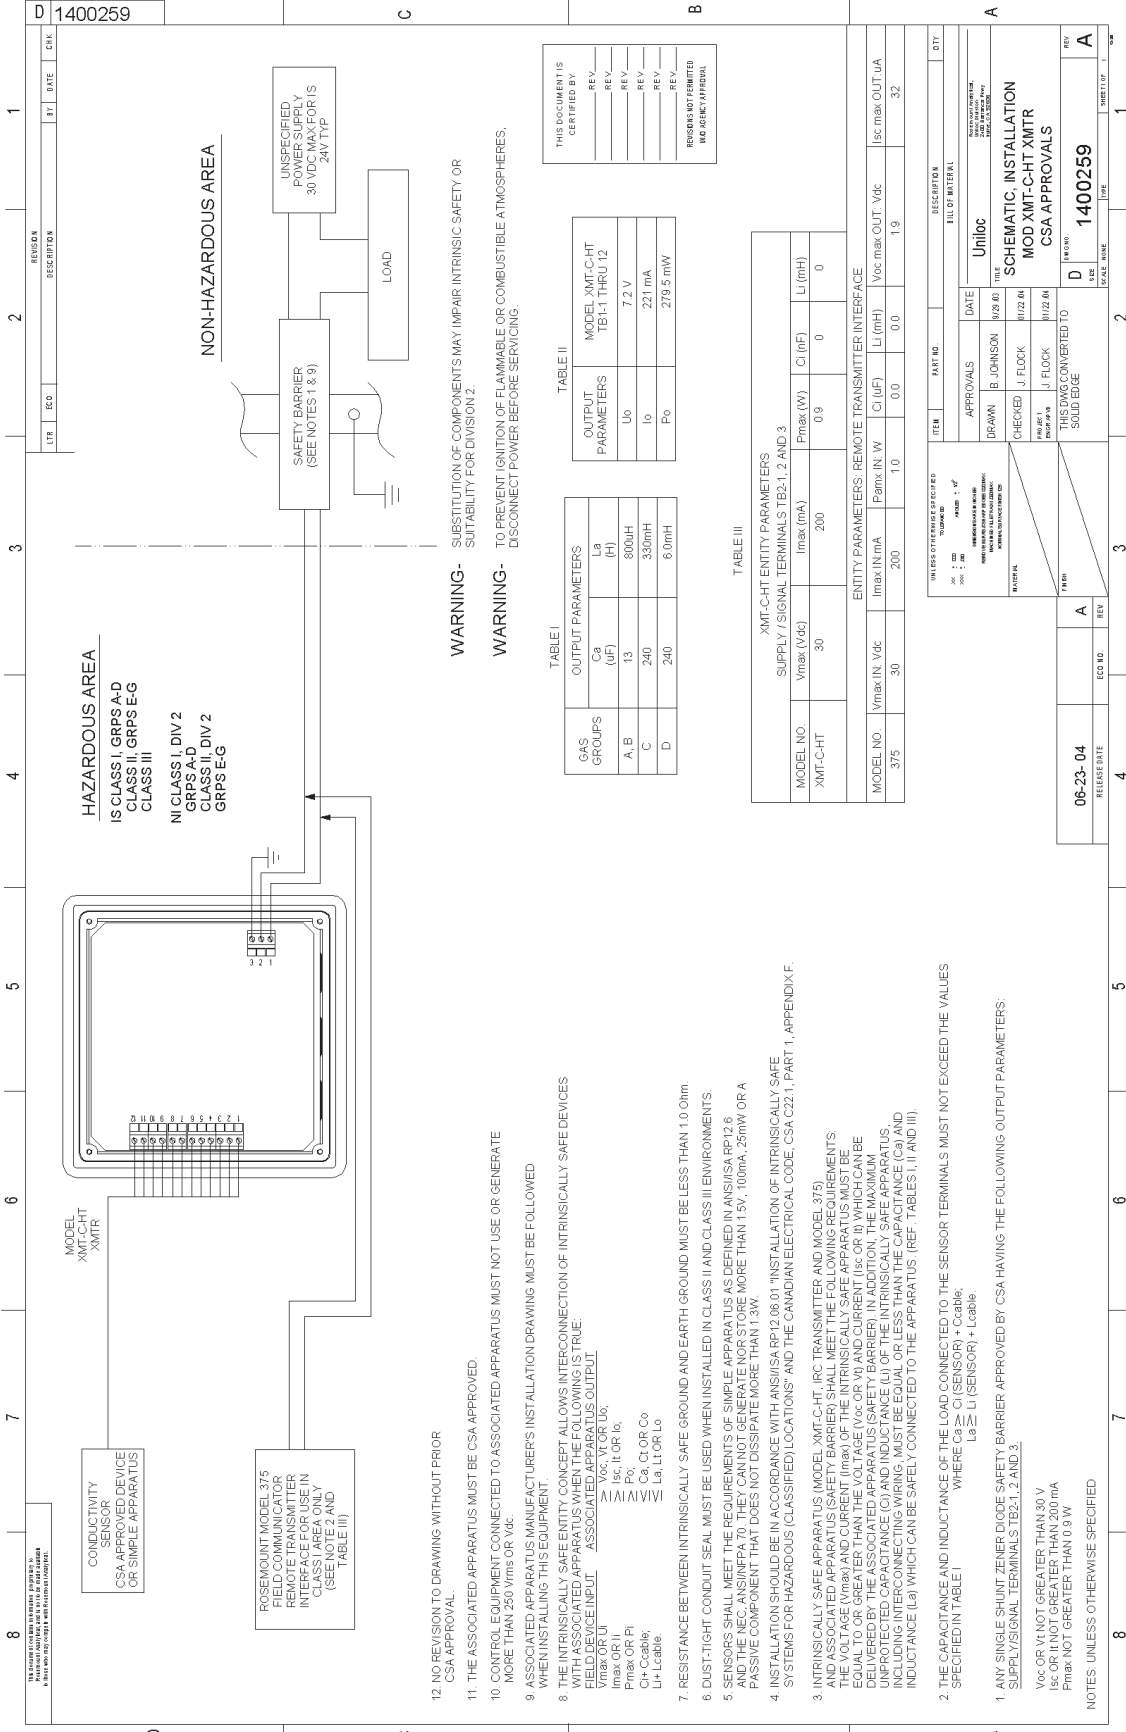


FIGURE 7. CSA Intrinsically Safe Installation Wiring

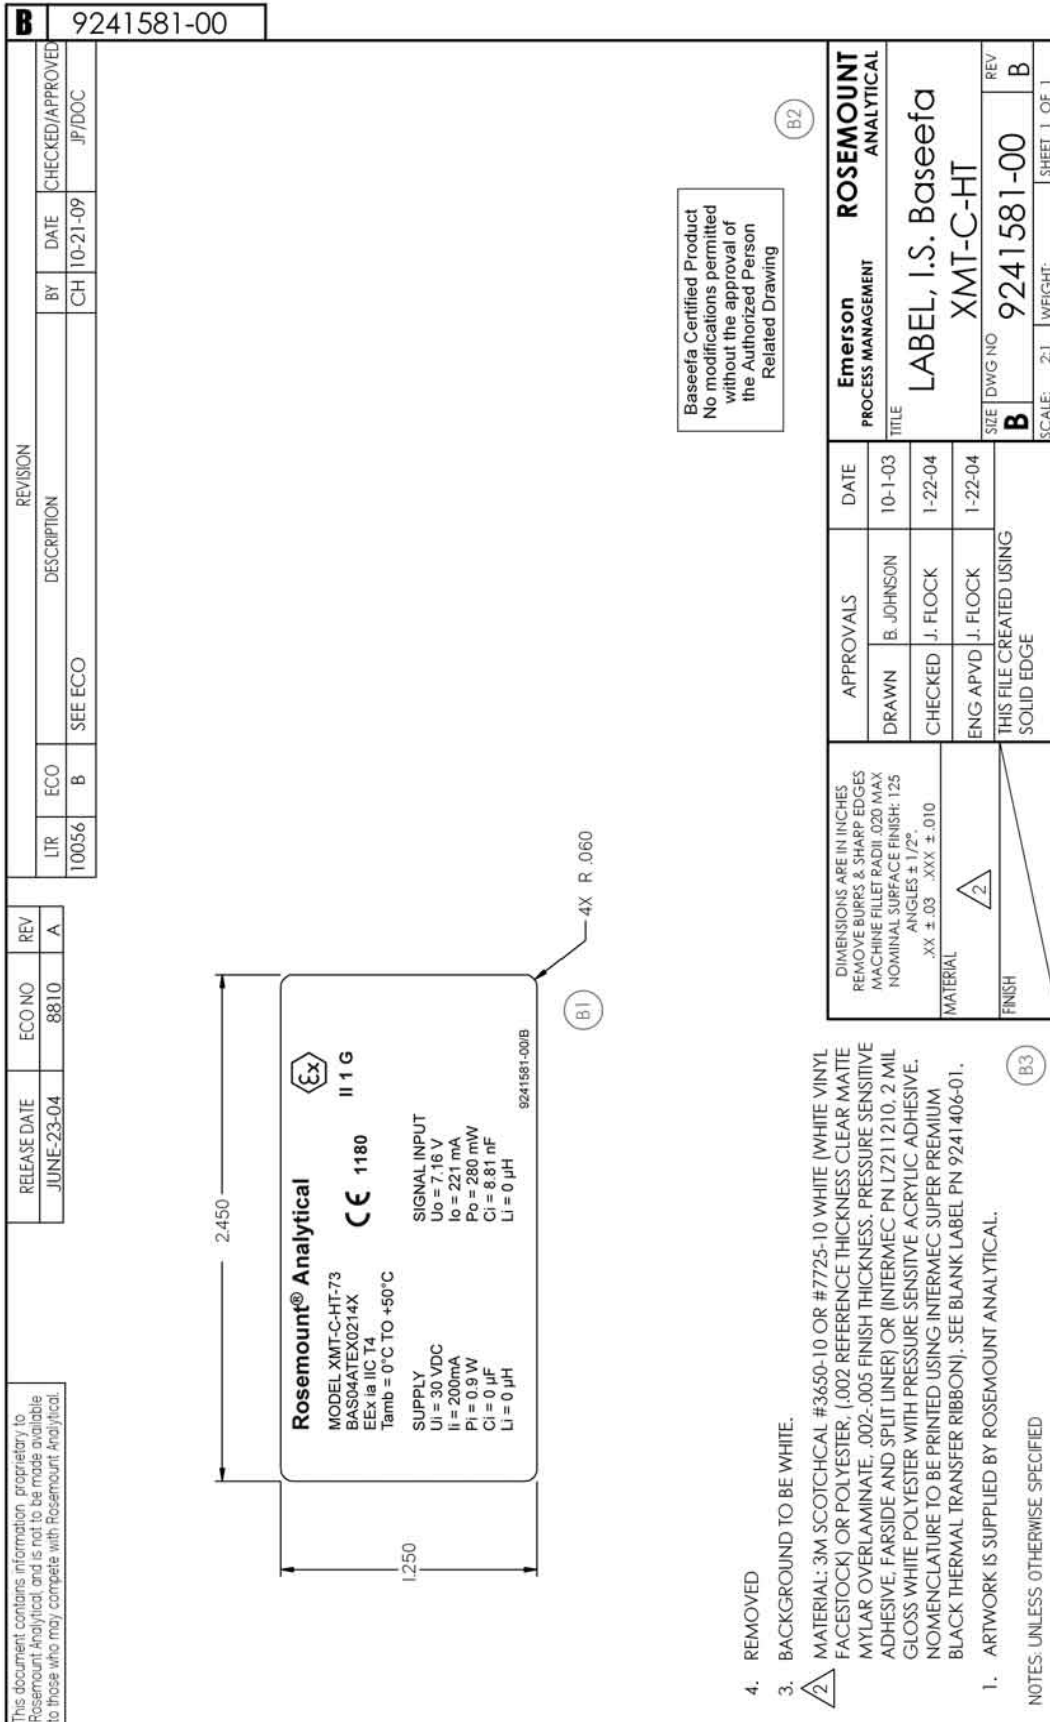


FIGURE 8. Baseefa/ATEX Intrinsically Safe Installation Label

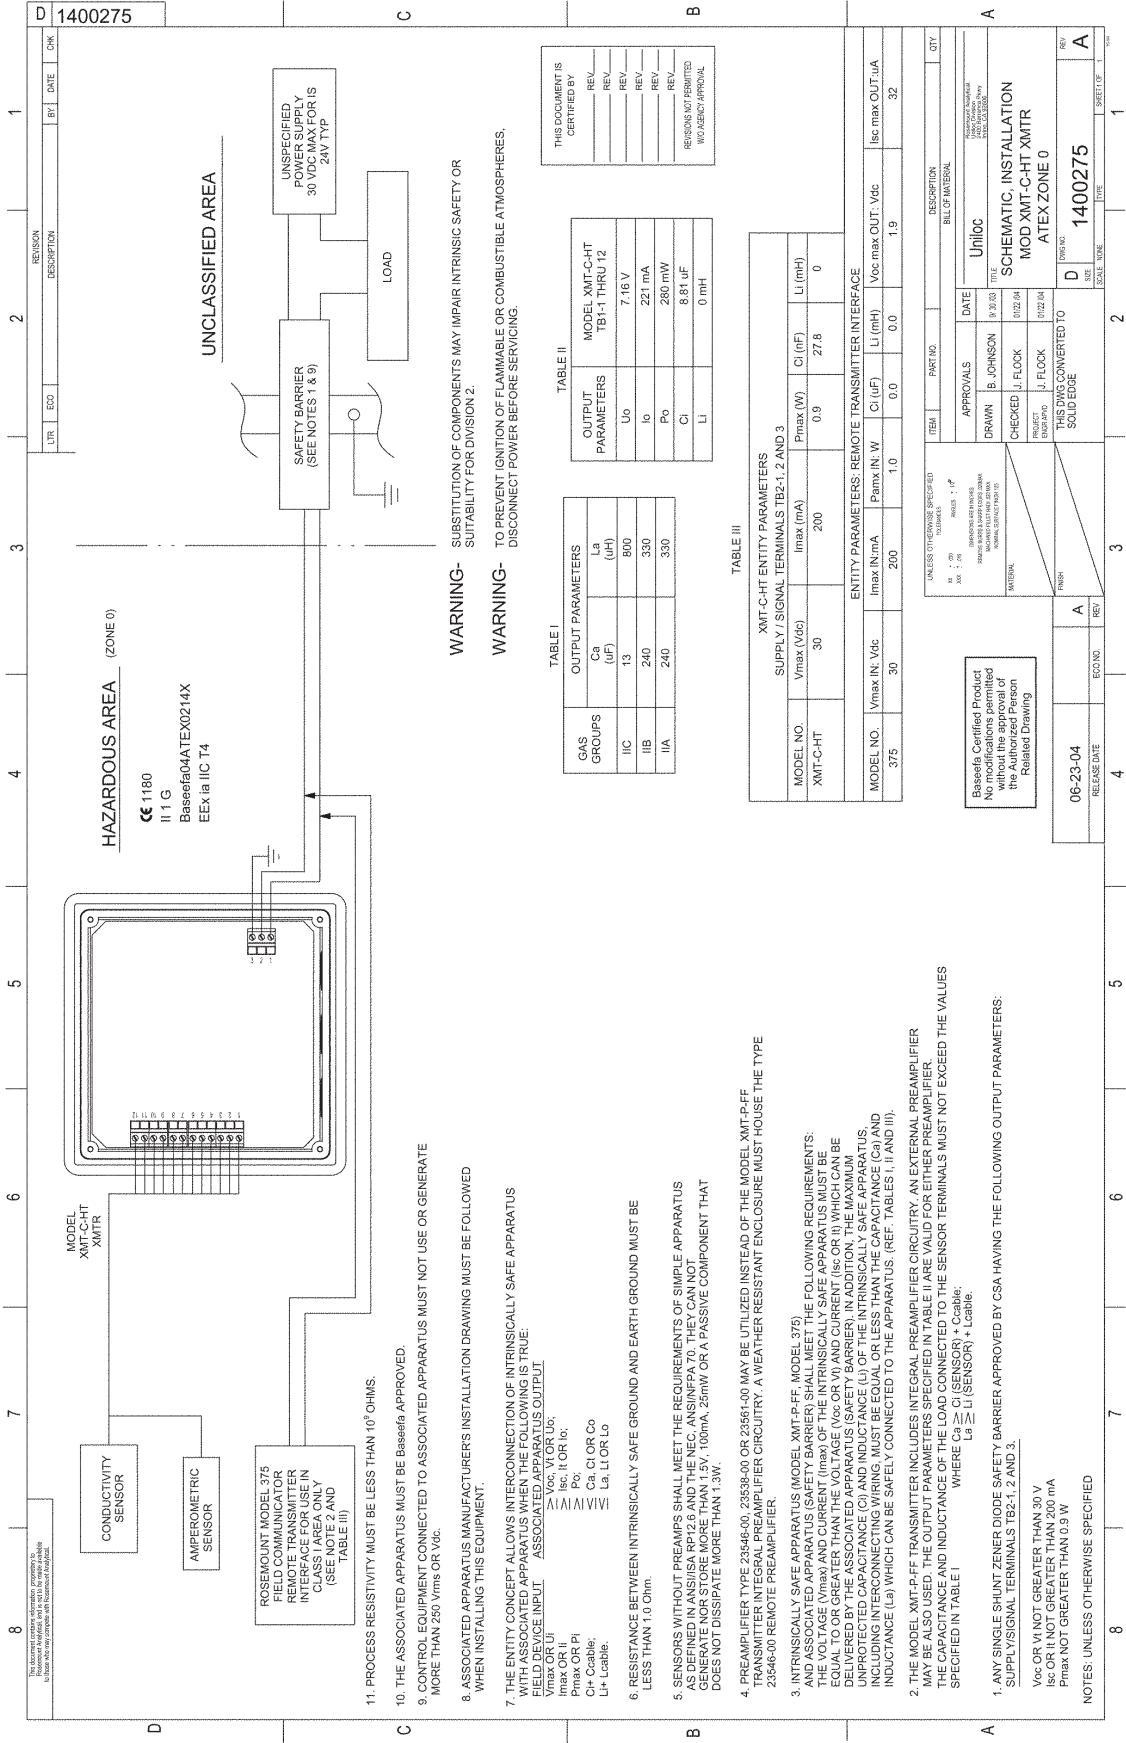


FIGURE 9. Baseefa/ATEX Intrinsically Safe Installation Wiring

B 9241565-00

RELEASE DATE 1/22/04	ECO NO 8810	REV A	LTR	ECO	BY	DATE	CHK
			REVISIONS				
			DESCRIPTION				

2.45

Rosemount[®] Analytical

MODEL
XMT-C-HT-57

OUTPUT 4-20mA

SUPPLY 42.4 VDC MAXIMUM

INTRINSICALLY SAFE FOR CLASS I, II & III, DIVISION 1.

GROUPS A, B, C, D, E, F & G

HAZARDOUS AREA WHEN CONNECTED PER DWG. 1400243

T4 Tamb = 50°C

NON-INCENDIVE CLASS I, DIVISION 2 GROUPS A, B, C & D

DUST IGNITION PROOF CLASS II AND III, DIVISION 1.

GROUPS E, F & G

WARNING: COMPONENT SUBSTITUTION MAY IMPAIR INTRINSIC SAFETY OR SUITABILITY FOR DIVISION 2

NEMA 4/4X ENCLOSURE

4X R.060

THIS DOCUMENT IS CERTIFIED BY

____ REV _____

____ REV _____

____ REV _____

____ REV _____

____ REV _____

____ REV _____

REVISIONS NOT PERMITTED W/O AGENCY APPROVAL

4. NO CHANGE WITHOUT FM APPROVAL.

3. ALL ALPHA AND NUMERIC CHARACTERS ON LABEL TO BE BLACK HELVETICA MEDIUM. BACKGROUND TO BE WHITE.

2

MATERIAL: 3M SCOTCHCAL #3650-10 (WHITE VINYL FACESTOCK) OR POLYESTER, (.002 REFERENCE THICKNESS CLEAR MATTE MYLAR OVERLAMINATE, .002-.005 FINISH THICKNESS, PRESSURE SENSITIVE ADHESIVE, FAR SIDE AND SPLIT LINER) OR (INTERMEC PN L7211210; 2 MIL GLOSS WHITE POLYESTER WITH PRESSURE SENSITIVE ACRYLIC ADHESIVE NOMENCLATURE TO BE PRINTED USING INTERMEC SUPER PREMIUM BLACK THERMAL TRANSFER RIBBON). SEE BLANK LABEL PN 9241406-01.

1. ARTWORK IS SHEET 2 OF 2.

NOTES: UNLESS OTHERWISE SPECIFIED

UNLESS OTHERWISE SPECIFIED TOLERANCES

XX : ±.33 ANGLES : 1/2°

XXX : 0/0

DIMENSIONS ARE IN INCHES

REMOVE BURRS & SHARP EDGES TO MAX

WASHED & FILED RADI TO MAX

VCN IN ALL SURFACE FINISH 1/2

MATERIAL

2

FINISH

ITEM	PART NO	DESCRIPTION	QTY
BILL OF MATERIAL			
Emerson			
TITLE			
LABEL, I.S. FM			
XMT-C-HT			
9241565-00			
SCALE 2:1			
SHEET 1 OF 2			

FIGURE 10. FM Intrinsically Safe Installation Label


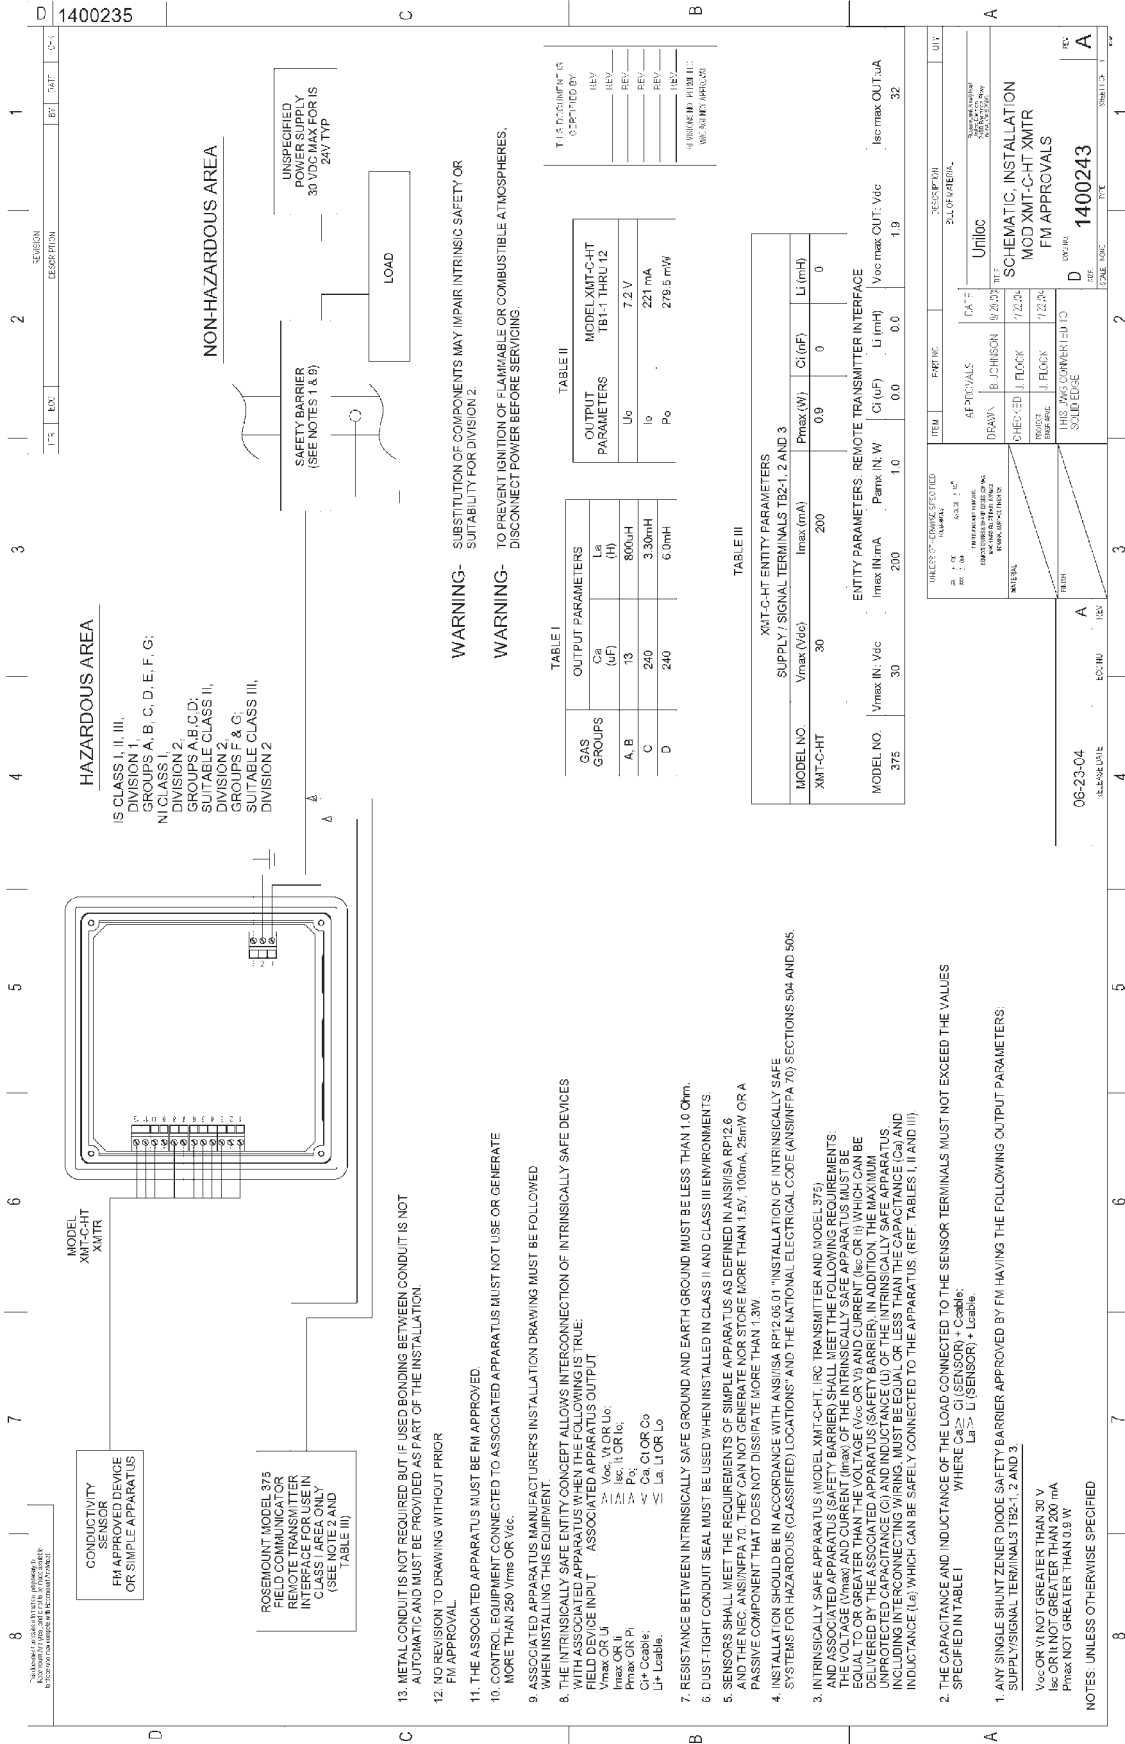


FIGURE 11. FM Intrinsically Safe Installation Wiring

MAIN MENU

MENU TREE FOR MODEL SOLU COMP Xmt-C-HT TRANSMITTER

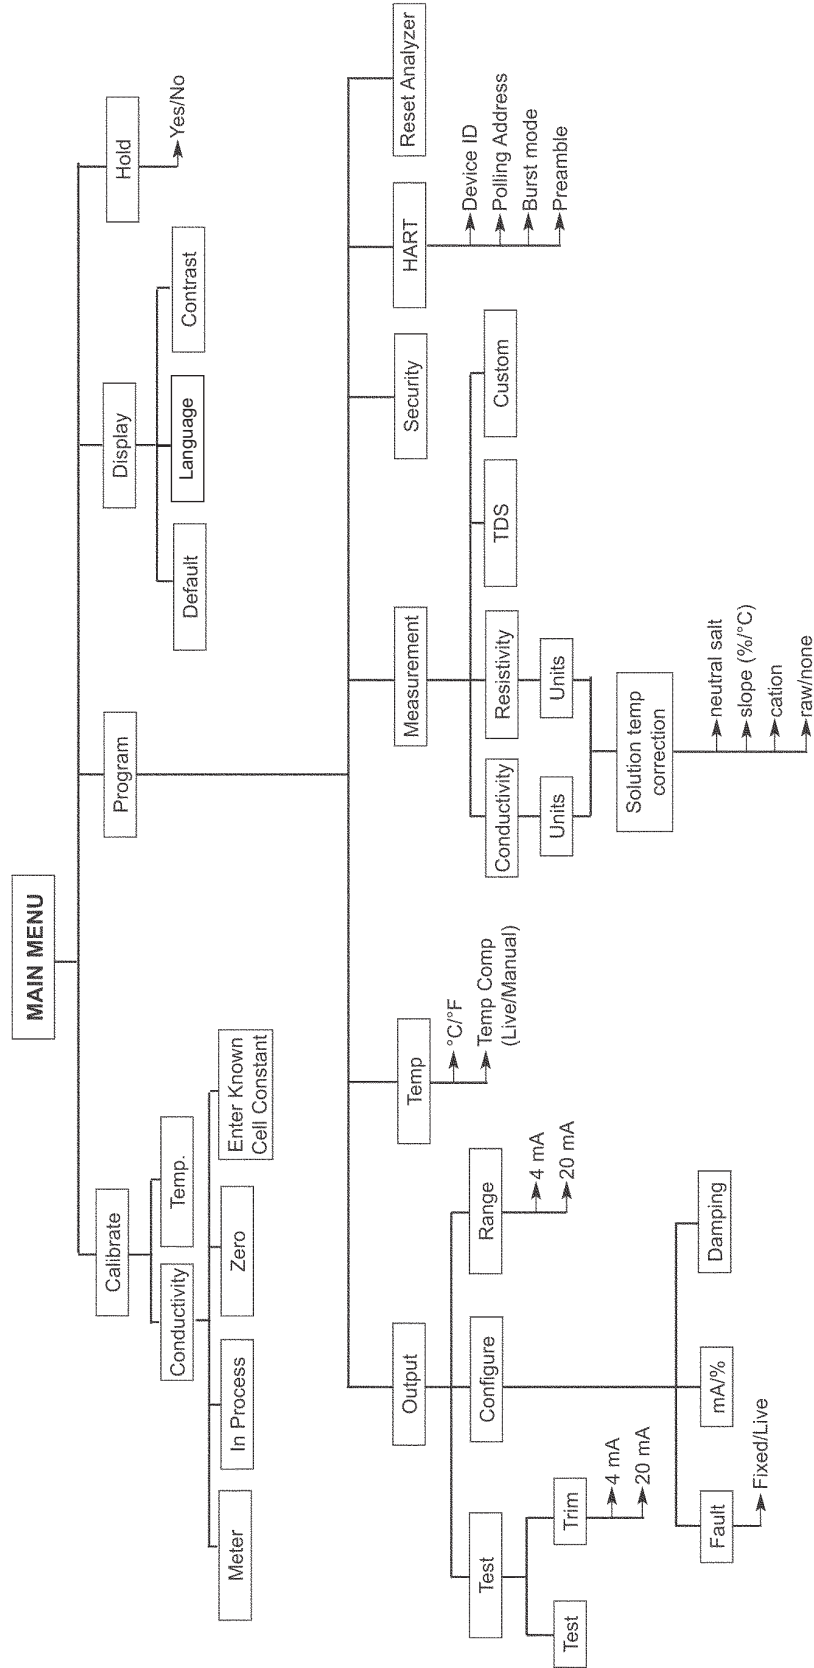

Emerson Process Management

2400 Barranca Parkway
Irvine, CA 92606 USA
Tel: (949) 757-8500
Fax: (949) 474-7250

<http://www.rainhome.com>