



SEE NOTE 6

- ⑥ ADJUSTMENT SPACE $\pm 90^\circ$. DURING STARTUP IT MIGHT BE NECESSARY TO TURN THE TRANSMITTER HEAD. THE LENGTH OF THE CABLES HAVE TO BE LONG ENOUGH.
- ⑤ MAX RECOMMENDED LENGTH OF PIPE MAY VARY DEPENDING OF THE DIAMETER AND IF THE PIPE IS CLEAN OR COVERED WITH DIRT, RUST, etc, INSIDE.

PIPE Ø	L: CLEAN PIPE	L: DIRTY PIPE
3"	15 METRES	4 METRES
4"	15 METRES	4 METRES
6"	20 METRES	4 METRES

ISSUED BY	GU-HF	WEEK	0307	PRODUCT CODE	PRO/5600	FILE	ACAD	INSTALLATION DRAWING TITLE	MECHANICAL INSTALLATION DWG
APPROVED BY	GST-TK	WEEK	0307	ORIGINAL DWG NO.	9150074-941	SCALE	-	DOC TYPE	PRO/5600, BRIDLE
ROSEMOUNT		1 ST ANGLE		2		DWG NO.		9150074-941	
		3		ISSUE		SHEET		2/2	