


# Type EZH Working Monitor

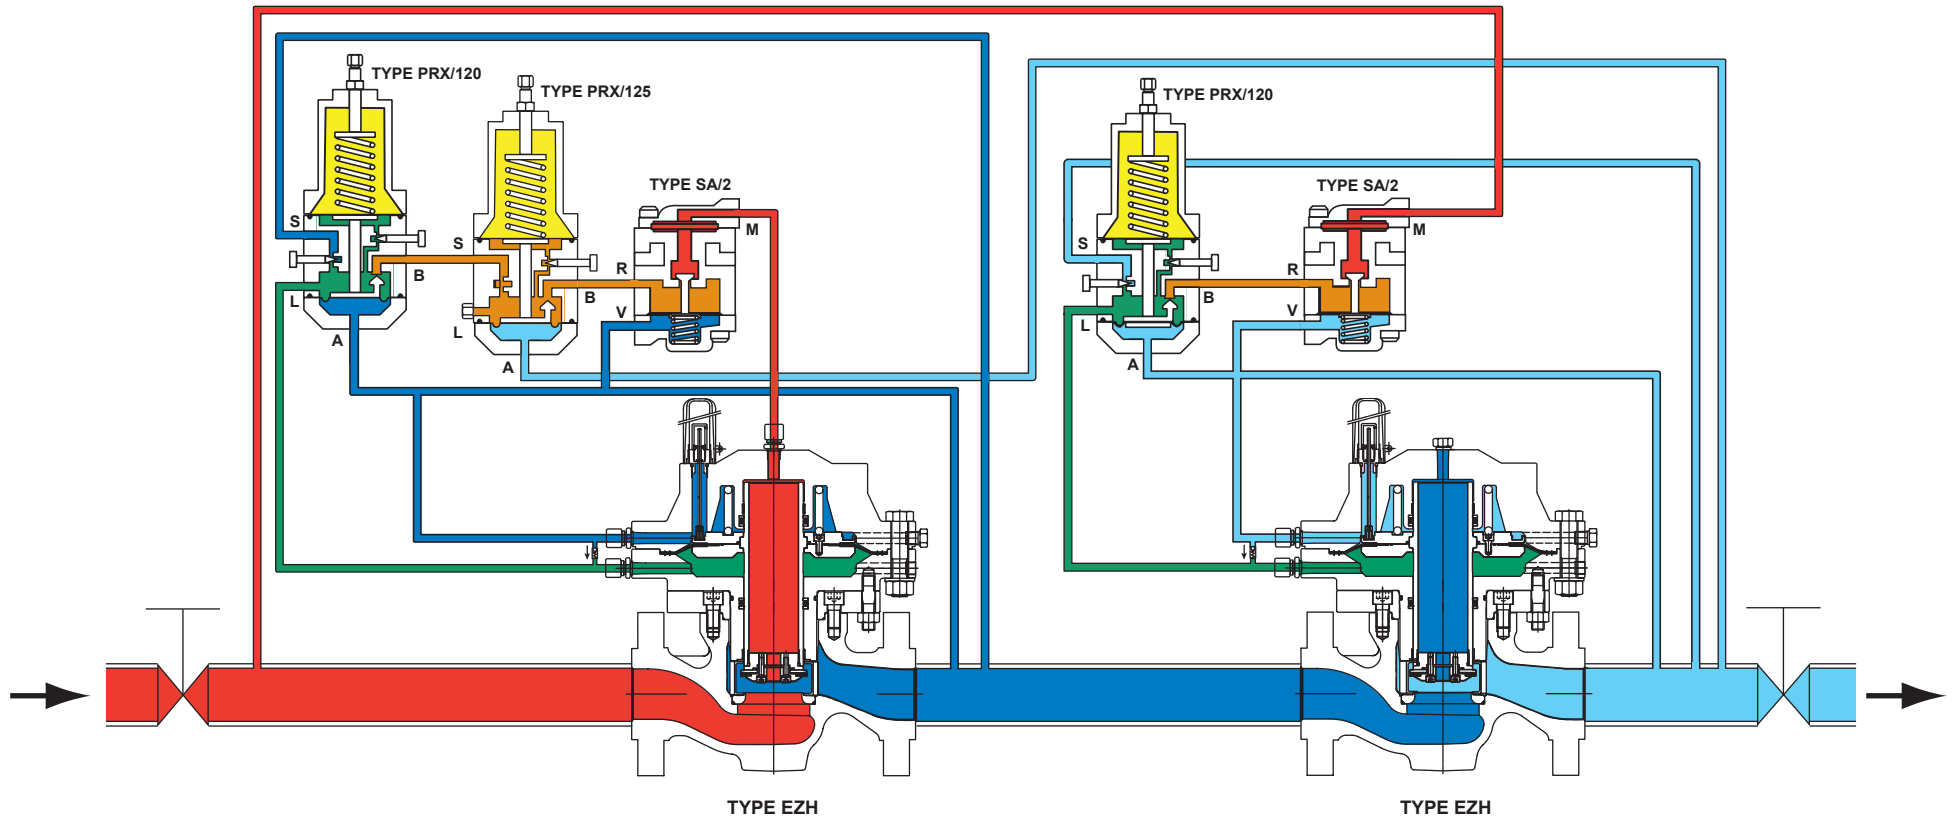

- INLET PRESSURE
- OUTLET PRESSURE
- ATMOSPHERIC PRESSURE
- LOADING PRESSURE
- INTERMEDIATE PRESSURE
- PILOT SUPPLY PRESSURE
- CHECK VALVE

NOTE: The check valve is not included on all constructions.

