


# Type EZR with Type 6358B Relief Pilot

A - VENT (TO ATMOSPHERE OR DOWNSTREAM PIPING)  
C - TO TYPE EZR LOADING CHAMBER  
D - PILOT SUPPLY (FROM UPSTREAM)

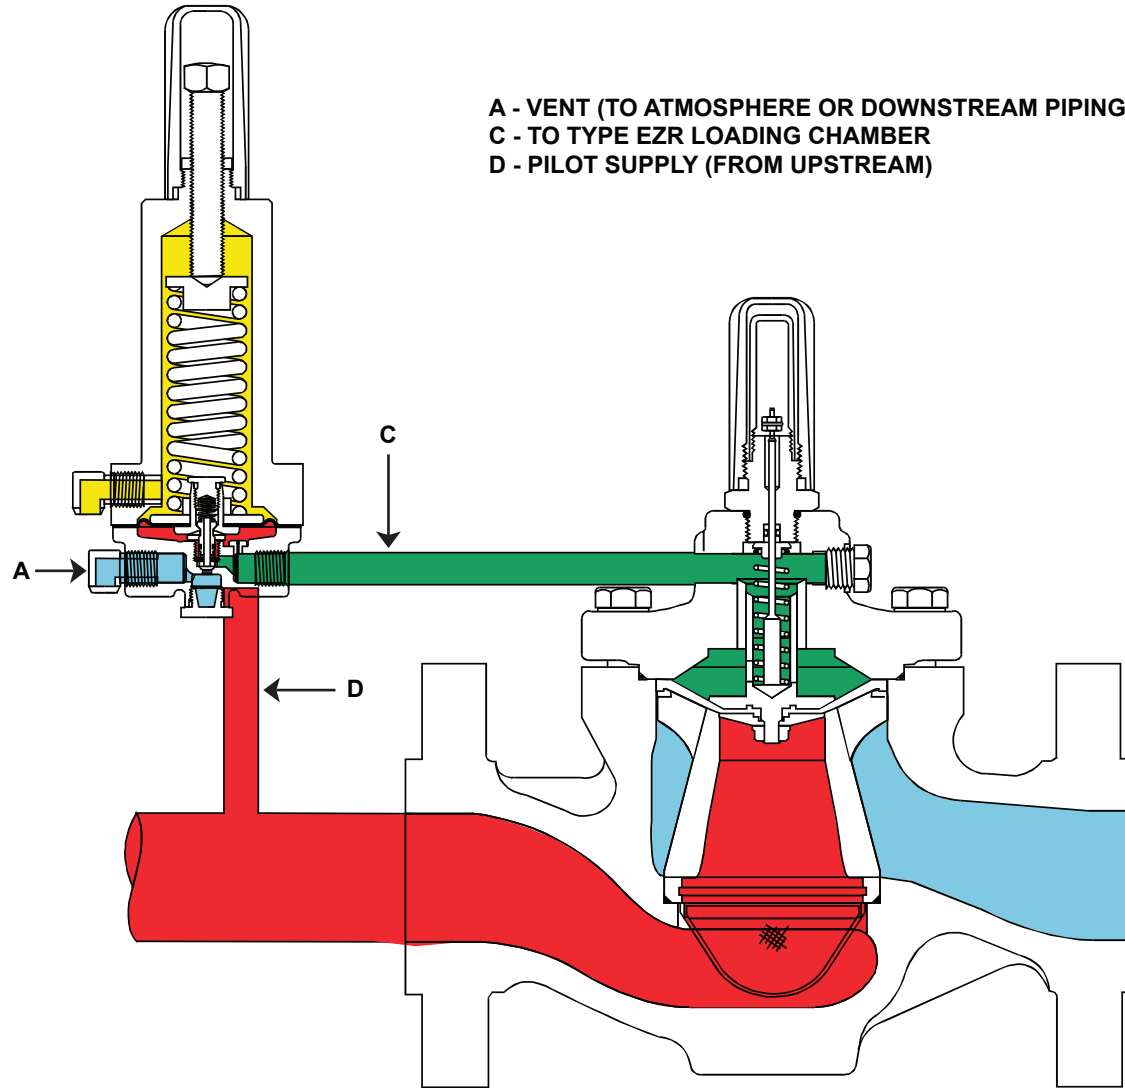

- INLET PRESSURE
- OUTLET PRESSURE
- ATMOSPHERIC PRESSURE
- LOADING PRESSURE

