



- ⑥ ADJUSTMENT SPACE $\pm 90^\circ$. DURING STARTUP IT MIGHT BE NECESSARY TO TURN THE TRANSMITTER HEAD. THE LENGTH OF THE CABLES HAVE TO BE LONG ENOUGH.
- ⑤ MAX RECOMENDED LENGTH OF PIPE MAY VARY DEPENDING OF THE DIAMETER AND IF THE PIPE IS CLEAN OR COVERED WITH DIRT, RUST, etc, INSIDE. TYPICAL MAX LENGTH (L):

PIPE ϕ	L: CLEAN PIPE	L: DIRTY PIPE
3"	15 METRES	4 METRES
4"	15 METRES	4 METRES
6"	20 METRES	4 METRES

ISSUED BY GU-HF	WEEK 0307	PRODUCT CODE PRO/5600	FILE ACAD	INSTALLATION DRAWING TITLE MECHANICAL INSTALLATION DWG PRO/5600, BRIDLE		
APPROVED BY GST-TK	WEEK 0307	ORIGINAL DWG NO. 9150074-941	SCALE -	DOC TYPE 2	DWG NO. 9150074-941	ISSUE 3
ROSEMOUNT				1 ST ANGLE		SHEET 2/2
<small>THE COPYRIGHT/OWNERSHIP OF THIS DOCUMENT IS AND WILL REMAIN OURS. THE DOCUMENT MUST NOT BE USED WITHOUT OUR AUTHORIZATION OR BROUGHT TO THE KNOWLEDGE OF A THIRD PARTY. CONTRAVENTION WILL BE PROSECUTED. ROSEMOUNT TANK RADAR AB, SWEDEN.</small>						