

Production Part	Description	XFAL-020Z-CFV-081	XFAL-020Z-TFC-081	XFAL-030Z-TFC-081	XFAL-035Z-CFV-081	XFAL-040Z-CFV-081	XFAL-040Z-TFC-081	XFAL-050Z-TFC-081	XFAL-051Z-CFV-081	XFAL-060Z-TFC-081
039-0026-06	TRANSDUCER - PRESSURE	039-0026-06	039-0026-06	039-0026-06	039-0026-06	039-0026-06	039-0026-06	039-0026-06	039-0026-06	039-0026-06
040-0046-24	RELAY-POTENTIAL								940-0046-24	
040-0166-37	RELAY-POTENTIAL	940-0001-79			940-0001-79	940-0001-79				
040-0181-00	RELAY-DEFROST	940-0181-00	940-0181-00	940-0181-00	940-0181-00	940-0181-00	940-0181-00	940-0181-00	940-0181-00	940-0181-00
050-0316-01	MOTOR-FAN	050-0316-01	050-0316-01	050-0316-01	050-0316-01	050-0316-01	050-0316-01	050-0316-01	050-0316-01	050-0316-01
062-7053-00	BOX-ELECTRICAL	062-7053-00	062-7053-00	062-7053-00	062-7053-00	062-7053-00	062-7053-00	062-7053-00	062-7053-00	062-7053-00
066-0387-00	CONDENSER							066-0387-00	066-0387-00	
066-0388-00	CONDENSER					066-0388-00	066-0388-00			
066-0389-00	CONDENSER	066-0389-00	066-0389-00							
066-0393-00	CONDENSER									066-0393-00
066-0800-00	CONDENSER			066-0800-00	066-0800-00					
067-0029-00	HEAT EXCHANGER					967-0025-00	967-0025-00	967-0025-00	967-0025-00	967-0025-00
067-0029-01	HEAT EXCHANGER	967-0025-01	967-0025-01	967-0025-01						
071-7018-00	BREAKER-CURCUIT	971-7018-00	971-7018-00	971-7018-00	971-7018-00	971-7018-00	971-7018-00	971-7018-00	971-7018-00	971-7018-00
074-1205-00	BRACKET:STABILIZER TOP	074-1205-00	074-1205-00	074-1205-00	074-1205-00	074-1205-00	074-1205-00	074-1205-00	074-1205-00	074-1205-00
074-1207-01	BRACKET:EXV									
074-1424-00	BRACKET-CONTROL MTG	074-1424-00	074-1424-00	074-1424-00	074-1424-00					
074-1425-00	BRACKET-CONTROL MTG					074-1425-00	074-1425-00	074-1425-00	074-1425-00	074-1425-00
074-7282-00	BRACKET-MOUNTING	074-7282-00	074-7282-00	074-7282-00	074-7282-00	074-7282-00	074-7282-00	074-7282-00	074-7282-00	074-7282-00
074-7283-00	BRACKET-HEAT EXCHANGER	074-7283-00	074-7283-00	074-7283-00	074-7283-00	074-7283-00	074-7283-00	074-7283-00	074-7283-00	074-7283-00
074-7284-00	BRACKET-COVER RIGHT	074-7284-00	074-7284-00	074-7284-00	074-7284-00	074-7284-00	074-7284-00	074-7284-00	074-7284-00	074-7284-00
077-0036-01	TANK-ACCUMULATOR					977-0036-01	977-0036-01	977-0036-01	977-0036-01	977-0036-01
077-0037-01	TANK-ACCUMULATOR	977-0037-01	977-0037-01	977-0037-01	977-0037-01					
077-0057-00	TANK-OIL SEPARATOR	977-0057-00	977-0057-00	977-0057-00	977-0057-00	977-0057-00	977-0057-00	977-0057-00	977-0057-00	977-0057-00
080-0139-08	TERMINAL BLOCK	980-0139-08	980-0139-08	980-0139-08	980-0139-08	980-0139-08	980-0139-08	980-0139-08	980-0139-08	980-0139-08
080-0139-09	TERMINAL BLOCK	980-0139-09	980-0139-09	980-0139-09	980-0139-09	980-0139-09	980-0139-09	980-0139-09	980-0139-09	980-0139-09
083-6931-00	BLADE	983-6931-00	983-6931-00	983-6931-00	983-6931-00	983-6931-00	983-6931-00	983-6931-00	983-6931-00	983-6931-00
085-7031-06	CONTROL-PRESSURE	985-7031-06	985-7031-06	985-7031-06	985-7031-06	985-7031-06	985-7031-06	985-7031-06	985-7031-06	985-7031-06
100-7034-00	Screw-Ambient Holder									
505-7099-00	DOOR ASSEMBLY	505-7099-00	505-7099-00	505-7099-00	505-7099-00					
505-7098-00	DOOR ASSEMBLY					505-7098-00	505-7098-00	505-7098-00	505-7098-00	505-7098-00
510-0730-00	Valve - Pressure Relief	910-0730-00	910-0730-00	910-0730-00	910-0730-00	910-0730-00	910-0730-00	910-0730-00	910-0730-00	910-0730-00
510-7062-00	VALVE-ACCESS	910-7062-00	910-7062-00	910-7062-00	910-7062-00	910-7062-00	910-7062-00	910-7062-00	910-7062-00	910-7062-00
529-0060-04	POWER CABLE-MOLDED PLUG	529-0060-04	529-0060-04	529-0060-04	529-0060-04					
529-0060-25	POWER CABLE-MOLDED PLUG					529-0060-25	529-0060-25	529-0060-25		
529-0114-08	Cable-transducer adapter									
529-0220-00	CABLE-SENSOR ASSEMBLY	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00
529-0220-01	CABLE-SENSOR ASSEMBLY	929-0304-00	929-0304-00	929-0304-00	929-0304-00					
529-0220-02	CABLE-SENSOR ASSEMBLY	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00
529-0220-03	CABLE-SENSOR ASSEMBLY	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00
529-0220-04	CABLE-SENSOR ASSEMBLY	929-0304-00	929-0304-00	929-0304-00	929-0304-00					
529-0220-05	CABLE-SENSOR ASSEMBLY	929-0304-00	929-0304-00	929-0304-00	929-0304-00					
529-0220-08	CABLE-SENSOR ASSEMBLY					929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00
529-0220-09	CABLE-SENSOR ASSEMBLY					929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00
529-0220-10	CABLE-SENSOR ASSEMBLY					929-0304-00	929-0304-00	929-0304-00	929-0304-00	929-0304-00
529-0222-01	CABLE-WIRE HARNESS	529-0222-01	529-0222-01	529-0222-01	529-0222-01					
529-0222-02	CABLE-WIRE HARNESS					529-0222-02	529-0222-02	529-0222-02	529-0222-02	529-0222-02
543-0214-00	CONTROLLER-ELECT. UNIT	943-0214-00	943-0214-00	943-0214-00	943-0214-00	943-0214-00	943-0214-00	943-0214-00	943-0214-00	943-0214-00
570-7003-06	INDICATOR-MOISTURE	970-7003-06	970-7003-06	970-7003-06	970-7003-06	970-7003-06	970-7003-06	970-7003-06	970-7003-06	970-7003-06
577-0542-00	RECEIVER ASSEMBLY	577-0542-00	577-0542-00	577-0542-00	577-0542-00					
577-0542-01	RECEIVER ASSEMBLY					577-0542-01	577-0542-01	577-0542-01	577-0542-01	577-0542-01

980-0080-00 Master Service Kit

Component	Description
912-1401-04	CONTACTOR
912-3040-02	CONTACTOR
914-0083-00	CAPACITOR-FAN
923-0068-00	COIL-EXV
037-0038-01	TRANSFORMER CONTROL
039-0026-06	TRANSDUCER - PRESSURE
940-0181-00	RELAY-DEFROST
971-7018-00	BREAKER-CURCUIT
529-0060-04	POWER CABLE-MOLDED PLUG
529-0060-25	POWER CABLE-MOLDED PLUG
929-0304-00	CABLE-SENSOR ASSEMBLY
529-0222-01	CABLE-WIRE HARNESS
529-0222-02	CABLE-WIRE HARNESS
943-0214-00	CONTROLLER-ELECT. UNIT
980-0086-00	TERMINAL BLOCK ASSEMBLY
980-0086-01	TERMINAL BLOCK ASSEMBLY