

KJ4006X1-BC1 Fused 8-Channel Terminal Block

Hazardous Atmosphere



II 3G Ex ec IIC Gc
FM19ATEX0173U
IECEX FMG 19.0019U
FM21UKEX0017U



CL. I Div. 2 GP. A,B,C,D
CL. I Zone 2 AEx/Ex ec IIC Gc
FM17CA0145U
FM17US0286U

Power Specifications

Field Power 60 VDC at 1 A/Channel

Environmental Specifications

Ambient Temperature	-40°C to +70°C
Shock	10g ½ Sinewave for 11msec
Vibration	1mm Peak to Peak from 2 to 13.2Hz; 0.7g from 13.2 to 150Hz
Airborne Contaminants	ISA-S71.04 –1985 Airborne Contaminants Class G3
Relative Humidity	5 to 95% Non-Condensing
Terminal Block Key Position	Set according to I/O card installed

Note: Refer to the product label for serial number and location and date of manufacture.

Warning: This product has specific instructions for installation, removal and operation in hazardous areas. Refer to document 12P5404 "*DeltaV™ S-Series Digital Automation System Zone 2 Installation Instructions*". Other installation instructions are

available in the "*DeltaV™ S-Series and CHARMs Hardware Installation*" manual.

Removal and Insertion

Terminals Block can be added or removed with System Power applied only when no I/O Card is installed, and no field wiring is connected to the terminal.

A rotary keying system ensures compatibility between I/O cards and terminal blocks after installation is complete. The terminal block must have the keys set for the I/O card with which it is used.

A terminal block fuse may NOT be removed with field power energized for non-sparking circuits.

Maintenance and Adjustment

This unit contains no user serviceable parts and should not be disassembled for any reason. Calibration is not required.

Other Safety Approvals

