



KEYSTONE BUTTERFLY VALVES FIGURE 55 INSTALLATION AND MAINTENANCE INSTRUCTIONS

Before installation these instructions must be fully read and understood

Please read these instructions carefully

Hazard potentials:

- disregarding of instructions
- improper use of product
- insufficiently qualified personnel

Valve application to be within the pressure/temperature limits indicated in the P/T diagram.

Essential points and functions of the valve should be inspected on a regular basis.

When the valve is used in an end-of-line function, PED Cat-I applications are allowed only. For other categories, contact factory.

1 STORAGE AND HANDLING

1.1 Protection

Keystone butterfly valves are delivered with protection in accordance with the Keystone Engineering Instructions, to protect the valve seats and disc from damage. Wrapping and/or covers should be left in place until immediately before fitting to the pipe.

1.2 Storage

When valves are to be stored for some time (2 months or more) before being fitted, storage should be in the original delivery crates or cases.

1.2.1 Storage conditions

The valves should be stored off the ground in a clean, dry indoor area. Protect the valve from temperature and humidity extremes, and exposure to excessive dust, moisture, vibration, deformations, sunlight and ozone.

Recommendations

1. Temperature: storage temperature below 25°C, above 0°C preferable below 15°C.
2. Humidity: storage conditions should be such that condensation does not occur, store in a dry environment. Maximal 50% relative humidity.
3. Light: valve rubbers should be protected from light, in particular direct sunlight or strong artificial light with high ultra violet.
4. Ozone: storage rooms should not contain any equipment generating ozone. E.g. lamps, electric motors.

IMPORTANT

Before valves are being installed or used the following actions are recommended.

1. *Valves/parts have to be inspected and thoroughly cleaned if required.*
2. *Rubber parts need to be greased with silicone grease if not present anymore.*
3. *All surfaces in contact with seats have to be thoroughly cleaned and greased with silicone grease if stored for more than 5 months.*

1.3 Handling

1.3.1 Packed valves

Lifting and handling of the packed valves in crates should be carried out by appropriate lifting equipment. If a fork lift truck is used, appropriate fork hitches are required. The lifting and handling of packed valves in cases will be carried out in the lifting points. The transportation of all packed material should be carried out safely and according the local safety regulations.

1.3.2 Unpacked valves

The lifting and the handling of these valves has to be carried out by using appropriate means and by respecting the carrying limits. The handling must, preferably, be carried out on pallets, protecting the machined surfaces and seat to avoid damage. When lifting the large dimension valves, the sling and the hooking of the load must be carried out by using the appropriate tools (brackets, hook, fasteners) and load balancing tools in order to prevent the valves from falling or moving during the lifting and handling. The valve may be lifted only by slings attached to the flange holes or valve body; never to the actuator or the valve opening.

DISCONTINUED

KEYSTONE BUTTERFLY VALVES FIGURE 55

INSTALLATION AND MAINTENANCE INSTRUCTIONS

2 INSTALLATION

WARNING

For safety reasons, it is important to take the following precautions before you start work on the valve:

1. Personnel making any adjustments to the valves should utilize suitable equipment. All required personal protection means should be worn.
2. The line must be depressurized before installing the valve.
3. Personnel trained in all aspects of manual and mechanical handling techniques only must carry out handling of the valves.
4. Misuse of the valve is not allowed. For example: the valve, handles, actuators or other parts may not be used as 'climbing tools'.
5. Ensure that valve pressure/temperature limitations marked on the identification tag are within the service conditions. The trim number on the valve's tagplate identifies the valve materials. See Product Manual for valve specific P/T diagram and trim number definition.
6. Ensure that valve materials are compatible with the pipeline fluid.

2.1 Valve inspection

1. Carefully remove the valve from the shipping package (box or pallet) avoiding any damage to the valve or, in case of automated valves, to the electric or pneumatic/hydraulic actuator or instrumentation.
2. Confirm that the materials of construction listed on the valve nameplate are appropriate for the service intended and are as specified.
3. It is not allowed to use third party spare parts. In case of third party spare parts, safe operation is not guaranteed.

2.2 Flange and pipe compatibility

Check matching of flange drilling pattern of valve and pipe flange before assembly.

Flanges have to meet the following requirements:


- The face inside diameter should be:
 - D min.: The valve Q-dimension + adequate disc clearance.
 - D max.: The inside diameter (ID) of standard pipe for the nominal size ISO 4200.
- If the flange (or pipe) is provided with a raised face, the diameter of this shall be at least 10 mm larger than the YY-dimension of the valve.

The use of the flange-gaskets is not allowed since it might damage the valve.

The Keystone seat-face design eliminates the need for the gaskets.

Use flange bolting in agreement with appropriate standard.

Do not use flange gaskets!

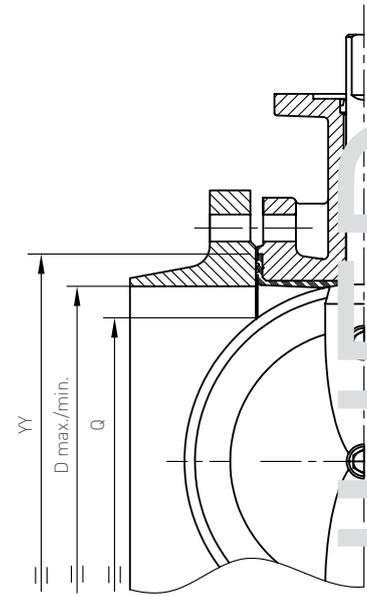

DISCONTINUED

KEYSTONE BUTTERFLY VALVES FIGURE 55

INSTALLATION AND MAINTENANCE INSTRUCTIONS

2.3 Valve installation

The valves are bi-directional and may be fitted in either direction relative to the flow. The valve will control flow equally in either direction. The recommended installation position is shaft horizontal and the lower disc edge opening down-stream. (Especially for slurry service and media with a tendency for sedimentation). For optimum valve control and smooth performance, it is recommended to have a 10 to 20 pipe diameters of straight run inlet piping and 3 to 5 pipe diameters straight outlet piping. A valve is no crow-bar. Do not use the valve to spread the flanges. Seat damage might be the result.

NOTES

- The valve can be installed in the pipe-line either with or without the actuator mounted on top of the valve. Make sure that you can turn the disc cautious so you can feel a mismatch resulting from a disc touching the adjacent piping.
- Do not use the valve as a support of the pipe line construction.
- Adjacent piping must be positioned so that minimal piping stresses are transmitted to the valve flanges during or after installation.
- Handling and lifting of the valves during installation MUST be performed following the same instructions described in previous paragraph '1.3 Handling'.

IMPORTANT

Mating flange faces should be in good condition and free of dirt and/or inclusions. Both pipe insides to be well cleaned.

2.3.1 Existing system (see sketch)

1. Check whether the flange distance meets the valve face-to-face dimensions. Spread with adequate tooling the flanges for easy insertion of the valve.
2. Close the valve so far, that the disc edge is at least 10 mm within the body.
3. Insert the valve between the flanges, center the valve body and insert all flange bolts.
4. Maintain the valve flange alignment while gradually removing the flange-spreaders and tighten the flange-bolts hand tight.
5. Slowly open and close the valve to check for adequate disc clearance.
6. Cross-tighten all bolting to the proper torque.

2.3.2 New system (see sketch)

1. With the disc in near-closed position center each mating flange with the valve body. Fix the body with some flange-bolts and tighten the bolts.
2. Use the flange-valve-flange assembly for fit-up and centering to the pipe.
3. Tack-weld the flanges to the pipe.
4. Remove the bolting and the valve from between the flanges.

IMPORTANT

Do not finish-weld the flanges to the pipe with the valve bolted between the flanges as this will result in serious heat-damage to the seat.

5. Finish-weld the flanges to the pipe and allow the flanges to cool completely.
6. Install the valve now according to the procedure for installing in existing systems.

DISCONTINUED

KEYSTONE BUTTERFLY VALVES FIGURE 55

INSTALLATION AND MAINTENANCE INSTRUCTIONS

2.4 Valve verification

Check the operation of the valve by operating it to 'full open' and 'full close'. To verify the valve operation, the disc position indicator on the actuator or the handle should rotate between the 'full open' and 'full close' indicators on the actuator or throttle plate. Generally the valve disc travels clockwise to close.

2.5 Sources of possible danger

This section contains some examples of possible foreseen danger sources.

2.5.1 Mechanical

- A. When manual operators are used, available space should be checked in order to avoid hands being clamped.
- B. Mechanical sparks caused on impact of valve and e.g. tooling, are a potential source of ignition of surrounding atmosphere.

2.5.2 Electrical

If static charges or stray electrical currents can initiate explosions, the valve should be grounded to earth.


2.5.3 Thermal

- A. If the valve is used in applications with a fluid temperature above 40°C the outside of the body might be hot. Sufficient measurements should be taken to avoid burning. A manual operated valve should be opened and closed with sufficient protection for the personnel operating the valve. For example: protecting gloves.
- B. Hot surfaces can be a potential source of ignition of the environment.


2.5.4 Operational

Closing a valve too fast may result in waterhammer in the upstream part of the pipeline. Waterhammer results in excessive stresses in the valve's body and will cause severe damage. Waterhammer should be avoided in all circumstances. Due to differential pressure across the valve disc, butterfly valves have the tendency to be closed by the flow. Take care when unlatching the valve operating mechanism.


EXISTING SYSTEM

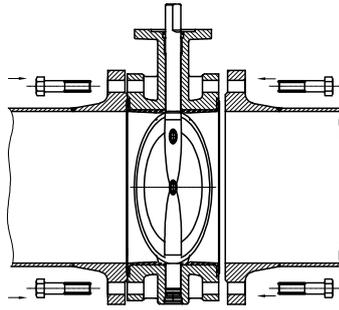

1. Spread the flanges with the adequate tooling. Insert some flange bolts to bear the valve.

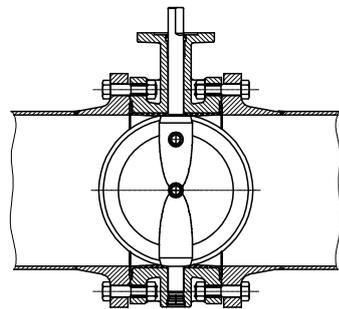


2. Open the valve and remove the flange spreads

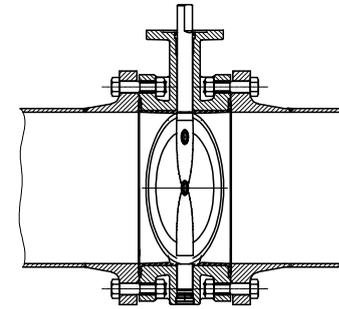


3. Close the valve clockwise, return to open position and cross-tighten all bolting.


NEW SYSTEM

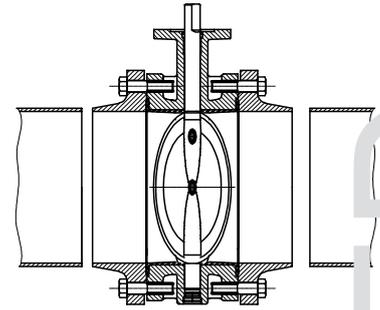

1. Center a flange-valve-flange assembly between the pipes.

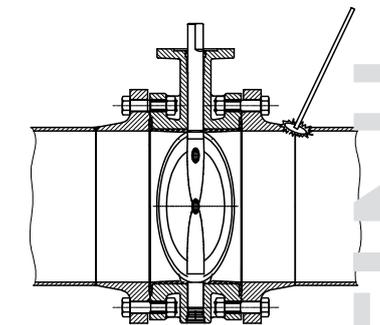

2. Tack weld the flanges to the pipes.

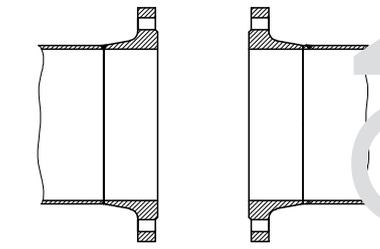

3. Remove the valve and finish weld. Install the valve according to the procedure in the left column.

KEYSTONE BUTTERFLY VALVES FIGURE 55

INSTALLATION & MAINTENANCE INSTRUCTIONS

2.6 TROUBLESHOOTING GUIDE

Symptom	Possible cause	Resolution
Valve would not rotate	Actuator has failed	Replace or repair
	Valve packed with debris	Flush or clean valve to remove debris
Valve leaking	Valve not fully closed	Close valve
	Debris trapped in valve	Cycle and flush (with valve open) to remove debris
	Seat is damaged	Replace valve
Jerky operation	Debris trapped in valve	Cycle and flush (with valve open) to remove debris
	Air supply actuator inadequate	Increase air supply pressure and/or volume

3 MAINTENANCE

The Keystone butterfly valve figure 55 is designed to require a minimum of maintenance.

WARNING

Depressurize and, if necessary in case of dangerous fluids, drain the line and flush with appropriate cleaning fluid before starting any maintenance. Failure to do so may cause serious personal injury and/or equipment damage. Before disassembling the valve ensure the valve has been decontaminated correctly from any harmful gasses or liquids and that it is within a safe temperature range for handling. Personnel making any adjustments to the valves should utilize suitable equipment. All required personal protection means should be worn. Only personnel trained in all aspects of manual and mechanical handling techniques must carry out handling of all valves.

3.1 Routine maintenance

Routine maintenance or lubrication is not required other than periodic inspection to ensure satisfactory operation and sealing.

3.2 Removing the valve

- Turn the disc to nearly closed position. (The disc is in line with the parallel flats or keyway in the stem).
- Loosen all flange bolts and remove the bolts.
- Spread the flanges with adequate tooling, and remove the valve.

3.3 Valve disassembly

- Turn the disc to almost open position.
- Remove actuator.
- Remove the disc screw(s) with the O-ring(s).
- Pull the shaft out of the body (shaft valve sizes DN 350 - 600 contain a tapped hole for mounting lifting eyebolt).
- Remove the disc by pulling or 'rolling' out of the seat bore.
- Remove circlip and pull the plug, containing an O-ring, out of the body.
- Remove the O-ring from the plug.
- Remove the dirt scraper and bushing from the body.

3.4 Valve assembly

- Clean all parts.
- Insert the bushing.
- Insert the shaft with sufficient (silicone) grease so far that it protrudes approximately 10 mm into the inside bore of the seat. Install the disc, with the disc screw holes toward the actuator flange, by inserting the disc in the seat with the shaft bore on the top side against the shaft, leaving the bottom part of the disc just outside the seat. Push the bottom part of the disc in place with a twisting motion.
- Insert the shaft completely using a rotating pressure on the shaft, and a rotating motion on the disc. Pay special attention in order that the seat is not damaged due to any misalignment of stem holes.
- Align the counter-drilled position of the stem screw holes. Place the O-ring(s) on the disc screw(s). Install the disc screw(s) and tighten securely.
- Place the O-ring onto the plug. Place the plug into the body and position it with a circlip.
- Assemble the dirt scraper.
- Mount the actuator.

3.5 Re-installing the valve

See paragraph 2.3.1.



DISCONTINUED

KEYSTONE BUTTERFLY VALVES FIGURE 55

INSTALLATION AND MAINTENANCE INSTRUCTIONS

Parts list

1.	Body
2.	Disc
3.	Seat
4.	Shaft
5.	Disc screw
6.	O-ring
7.	Bushing
8.	Plug
9.	O-ring
10.	Circlip
11.	Dirt scraper

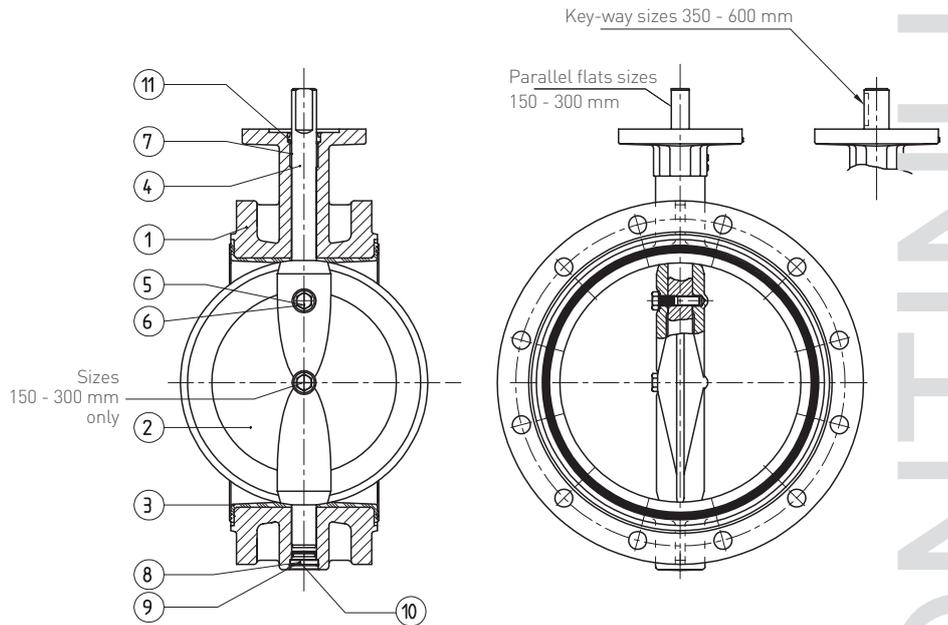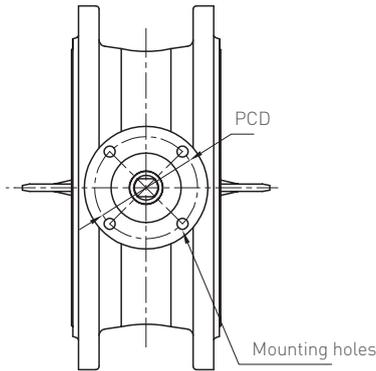

VCIOM-00756-EN © 2017, 2019 Emerson Electric Co. All rights reserved 01/19. Keystone is a mark owned by one of the companies in the Emerson Automation Solutions business unit of Emerson Electric Co. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their prospective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

Emerson Electric Co. does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson Electric Co. product remains solely with the purchaser.

Emerson.com/FinalControl

DISCONTINUED