

Measuring Hydrogen Sulfide in Refinery Fuel Gas with a Simple TCD-based Gas Chromatograph

As part of the Clean Air Act Amendments (CAAA) passed by the U.S. congress in the early 1990s, the measurement of hydrogen sulfide (H_2S) in refinery fuel gas became mandated for most U.S. refineries. Since then, a number of sites are switching to online gas chromatographs using a simple and rugged thermal conductivity detector for the measurement.


H_2S in Refinery Fuel Gas Application

Refinery fuel gas is a collection of light gases generated in a number of processing units in the refinery. The light gases are first collected and processed in a gas-processing unit to recover any valuable heavier components that may be present as well as removing most of the sulfur compounds such as H_2S . The remaining light gases are then used as fuel for process heaters and boilers.

Table 1 shows a typical composition of the refinery fuel gas. The actual chemical composition can vary dramatically due to several processing units that contribute light gases into the fuel gas. Due to this fluctuation, it was common for refineries to put online analyzers on the fuel gas process to track the changes in BTU value for improved heater and boiler control.

With the CAAA, the measurement of the H_2S value in the refinery fuel gas was mandated whenever the fuel gas was used as a fuel for boilers and process heaters. Since nearly every refinery used the fuel gas as a source of "free" fuel, measurement of H_2S in refinery fuel gas became a requirement nearly every refinery was faced with making.

Over the years, many refineries are finding that their choice of analyzer involved high levels of maintenance. Lead acetate analyzers were maintenance-intensive due to their very mechanical design. Lead acetate analyzers also required special disposal procedures for the spent lead tape. Refineries using online gas chromatographs with flame photometric detectors (FPD) were also seeing high levels of maintenance required to keep the FPDs flame lit and operating properly.

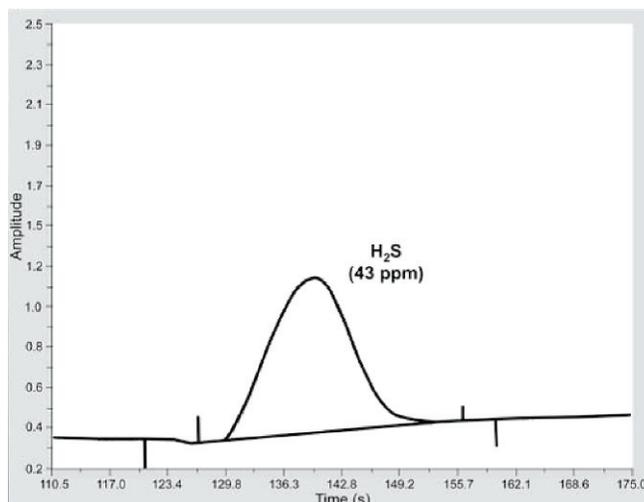

Typical Chromatogram of PPM Level H_2S Using a Thermal Conductivity Detector on the Rosemount Analytical Gas Chromatograph

Emerson's Gas Chromatograph Solution The online gas chromatograph from Emerson is a solid alternative for making the H_2S measurement. Rather than using a complicated, difficult-to-maintain FPD detector, the Rosemount Analytical gas chromatographs use a much simpler and rugged thermal conductivity detector (TCD) – even for measurements in the low parts-per-million range. Thermal conductivity detectors work on the principal that all compounds have unique thermal conductivity properties. By comparing the thermal conductivity of the component to be measured against the properties of a reference gas (usually the chromatograph carrier gas), very precise measurements can be made. The Rosemount Analytical TCD detector can measure compounds such as H_2S down to the 3 ppm detection levels – perfect for H_2S in fuel gas applications where the typical measuring range is 0–300 ppm.

Refining

The Rosemount Analytical gas chromatograph can also perform the daily high and low validation checks that are mandated by the regulations. Introduction of validation gases can be set up on an automated basis. The software of the analyzer can also automatically check the results for alarm conditions and log the data automatically.

Using a TCD enables other measurements to be made in the fuel gas such as the BTU content. Many refineries prefer to keep the fuel gas above a certain level so knowing the BTU content of the fuel gas optimizes the amount of pipeline quality natural gas this is needed to maintain the BTU above that minimum.

In addition to exceptional analytical capability, Rosemount Analytical gas chromatographs offer the lowest cost of ownership in the industry. Most process measurements can be made at or near the sample point greatly reducing the overall lifetime cost of the measurement. Expenses such as shelters, air conditioning, heating, and long/heated sample lines can be minimized or completely eliminated in most applications.

Furthermore, Rosemount Analytical gas chromatographs are designed to operate unattended for long periods of time without adjustment. When adjustments are required, all components are easily accessible and can be performed in the field in minutes with standard tools.

Table 1 - Typical Composition of Refinery Fuel Gas

	Typical Concentration	Measuring Range
Hydrogen (H ₂)	25 %	
Oxygen (O ₂)	2 %	
Nitrogen (N ₂)	5 %	
Carbon Dioxide (CO ₂)	1 %	
Methane (C ₁)	35 %	
Ethane (C ₂)	15 %	
Ethylene (C ₂ =)	5 %	
Propane (C ₃)	5 %	
Propylene (C ₃ =)	2 %	
C ₄ 's	2 %	
C ₅ 's	2 %	
C ₆ ⁺	1 %	
H ₂ S	150 ppm	0–300 ppm
BTU	900 BTU	800–1200 BTU

www.RosemountAnalytical.com

www.analyticexpert.com

www.twitter.com/RAIhome

Emerson Process Management

Rosemount Analytical
Gas Chromatograph Center of Excellence
10241 West Little York, Suite 200
Houston, TX 77040 USA
Toll Free 866 422 3683
T +1 713 396 8880 (North America)
T +1 713 396 8759 (Latin America)
F +1 713 466 8175
gc.csc@emerson.com
www.RosemountAnalytical.com

©2012 Emerson Process Management. All rights reserved.

The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount Analytical is a mark of one of the Emerson Process Management family of companies. All other marks are the property of their respective owners.

The contents of this publication are presented for information purposes only, and while effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the designs or specifications of our products at any time without notice.

ROSEMOUNT[®]
Analytical

42-PGC-AN-REFINING-H2S-TCD


EMERSON[™]
Process Management