

# S-series Virtual I/O Module 2

- Non-intrusive DeltaV™ I/O simulation
- Powerful integration solution
- Easy to use
- Modular, flexible packaging



The S-series Virtual I/O Module 2 provides DeltaV I/O simulation and a high speed Ethernet I/O device integration platform.

## Introduction

The DeltaV S-series Virtual I/O Module 2 (VIM2) provides nonintrusive simulation of the DeltaV S-series I/O Cards and digital bus field devices for process simulation when used with MYNAH Technologies' Mimic Simulation Software. DeltaV control strategies and system configurations can be fully tested with this powerful simulation interface.

The VIM2 also provides an interface to Ethernet I/O networks and devices that use the Modbus TCP or EtherNet/IP protocol drivers. DeltaV S-series controllers can read and write signals from plant floor devices connected to Ethernet I/O networks such as PLC's, Motor Control Centers, and Weigh Scales.

## Benefits

**Non-Intrusive DeltaV I/O simulation.** Use the VIM2 in conjunction with the **MYNAH Technologies' Mimic Simulation Software** to simulate your DeltaV S-series I/O and digital bus field devices.

- **Supports DeltaV I/O modules.** Provides completely non-intrusive simulation of all DeltaV S-series I/O Modules. Supports autosensing of I/O and accurate testing of controller loading. DeltaV configuration can be fully tested without modifying the control strategies.
- **Digital bus support.** Provides simulation of all DeltaV Digital Busses and Foundation Fieldbus function blocks. Supports Foundation Fieldbus control in the field configuration testing.
- **Powerful simulation solution.** Provides full simulation of up to 64 DeltaV I/O modules per controller. Simulation execution is fast and efficient; the DeltaV controller thinks it's talking with real I/O.

**Powerful integration solution.** Use the VIM2 in conjunction with the **MYNAH Ethernet I/O** drivers to integrate your DeltaV system with your Ethernet I/O device networks.

- **Large device capacity.** Each VIM2 emulates four DeltaV Serial Cards and supports up to 128 Serial Card Datasets of information from up to 128 network devices in simplex and up to 256 in dual simplex installations as well as 16 devices in redundant installations. Communication over the Ethernet I/O device network is fast and efficient.
- **Flexible networking.** User configurable IP addressing allows the VIM2 to be used in almost any plant environment regardless of networking scheme. The VIM2 and the Ethernet I/O devices must be on the same IP subnet to communicate.
- **1:1 Redundancy.** Redundancy can be achieved by adding a second VIM2 and configuring the two cards as a redundant pair - when supported by the protocol. The VIM2 appears as four redundant DeltaV Serial Card pairs. Automatic switchover of primary to standby cards is handled like the DeltaV Serial Card. The operator is given clear notification of a switchover at the operator display. Manual switchover can be controlled in DeltaV Diagnostics.

**Easy to use.** The VIM2 is easy to use and well integrated into the DeltaV system. Specific ease of use features include:

- **Automatic updates.** Simulation I/O driver updates for the VIM2 are included with the Mimic software releases. Updates are quick and easy over the simulation network.
- **Seamless Ethernet I/O integration.** When used with the MYNAH Ethernet I/O drivers, the VIM2 is seen by the DeltaV S-series controller as four DeltaV Serial Cards. Commissioned VIM2s are then auto-sensed by the DeltaV controller as DeltaV Serial Cards.

- **Configured in DeltaV Explorer.** When serial dataset configuration is used for the Ethernet I/O integration, it is done in the DeltaV Explorer in the same manner as a DeltaV Serial Card. Ethernet I/O signals can be used in DeltaV Control Modules, displayed on DeltaV Operate graphics, and stored in the DeltaV Continuous Historian.
- **Intuitive setup.** The VIMNet Explorer application provides plug-n-play capability making setup of the VIM2 easy and intuitive. Graphical drag-n-drop functionality makes setting up multiple VIM2s almost effortless. VIMNet Explorer is integrated with DeltaV Explorer to make setup of the VIM2 easy and intuitive.

**Modular, flexible packaging.** The VIM2 mounts in the same manner as the DeltaV controller. It mounts in the controller slot of a DeltaV 2-wide horizontal carrier and uses a standard DeltaV System Power Supply. The advanced design of the VIM2 will provide years of uninterrupted use.



S-series System Power supply and VIM2.

## Product Description

The VIM2 may be used for either DeltaV I/O simulation or Ethernet I/O device integration. The VIM2 mounts on a 2-wide carrier on either side of the DeltaV controller. A dedicated DeltaV system power supply is required.

**IO Simulation.** When used with MYNAH's **Mimic Simulation Software**, the VIM2 supports I/O simulation for all DeltaV S-series I/O cards including classic IO, FOUNDATION Fieldbus, ProfibusDP, DeviceNet, ASi-bus and Serial.

Mimic Simulation Software provide dynamic simulation for DeltaV system software acceptance testing and operator training. The Mimic software works by simulating the DeltaV I/O. It also simulates field devices using FOUNDATION Fieldbus, ProfibusDP, DeviceNet and AS-i bus. In order for Mimic to do this, the real I/O cards are disconnected from the control system. The Mimic driver writes to the I/O subsystem of the DeltaV controller. Process models in Mimic simulate realistic process reactions to control system output signals.

Each process controller being simulated uses one Mimic Dataset. A Mimic server can have up to 32 datasets or ports. Each dataset can support up to 4000 Mimic simulation tags.

The I/O simulation driver is provided with the VIM2 hardware, pre-loaded in the VIM2. The Mimic Simulation Software must be purchased separately from MYNAH Technologies. Technical support for the Mimic Simulation Software and I/O simulation driver is provided by MYNAH Technologies.

**Ethernet I/O integration.** When used with the MYNAH **Ethernet I/O drivers**, the VIM2 can communicate with high-speed Ethernet networks over Modbus TCP or Ethernet/IP. Depending on which EtherNet I/O driver is used to configure the VIM2, the DeltaV Controller auto-senses a commissioned VIM2 as four or eight DeltaV Serial Cards or DeviceNet Cards.

- In simplex installations these cards will be sensed in slots 57-60 or 61-64.
- In dual simplex installations these cards will be sensed in slots 57 to 64.

In redundant installations the redundant pairs will be sensed in slots 57 to 64. Configuration of the I/O signals from the commissioned VIM2 is done in the DeltaV Explorer in the same manner as either for a DeltaV Serial or DeviceNet Card.


**VIMNet Explorer.** The **VIMNet Explorer** utility allows the user to commission the VIM2, setup primary, secondary, and/or redundant VIM2s, and the Ethernet I/O network. The user is able to specify the IP address, Subnet Mask, and Gateway of each VIM2 and set the node address and names of each Ethernet I/O device that is used by the VIM2. The VIMNet Explorer is also used to flash upgrade a VIM2 from one version of a driver to another or to replace an existing driver type with another. Only one Ethernet I/O driver may be loaded in the VIM2 at one time.

The VIMNet Explorer application must run on a workstation that has network connectivity to the Ethernet I/O network. This may be a DeltaV workstation with the third network interface card (NIC) connected to the Ethernet I/O network or may be a non-DeltaV workstation. The VIMNet Explorer runs on the MS Windows XP or Windows 7 operating system and has an intuitive, graphical user interface. Connection to the VIM2 is done through the RJ-45 Network Connection on the bottom of the VIM2.

The VIMNet Explorer software installation file for the VIM2 is available on a DeltaV v12 and later workstation and on the DeltaV v12 and later software installation DVD. The VIMNet Explorer software installation file is also provided with the purchase of a MYNAH Ethernet I/O driver.

**VIM2 dual simplex or redundant setups.** Two VIM2s can either be setup as a dual simplex or redundant pair for installations that either consist of a lot of slaves or requires backup Ethernet I/O networks. Each VIM2 will be installed on its own 2-wide carrier, with its own system power supply to the left side of simplex or redundant DeltaV Controllers.

If they are setup for dual simplex operation, both VIM2s will work as standalone units, therefore no need for the redundancy link cable. If they are setup for redundant operation, the active and standby VIM2s monitor each other with a continuous status command using the redundancy link cable supplied with each redundant pair. The active VIM2 communicates over the network to the Industrial Ethernet device and the standby sends an intermittent signal to the device to maintain communication integrity. The Ethernet I/O drivers are not provided with the VIM2 hardware; they must be purchased separately from MYNAH Technologies. Technical support for the Ethernet I/O drivers is provided by MYNAH Technologies.

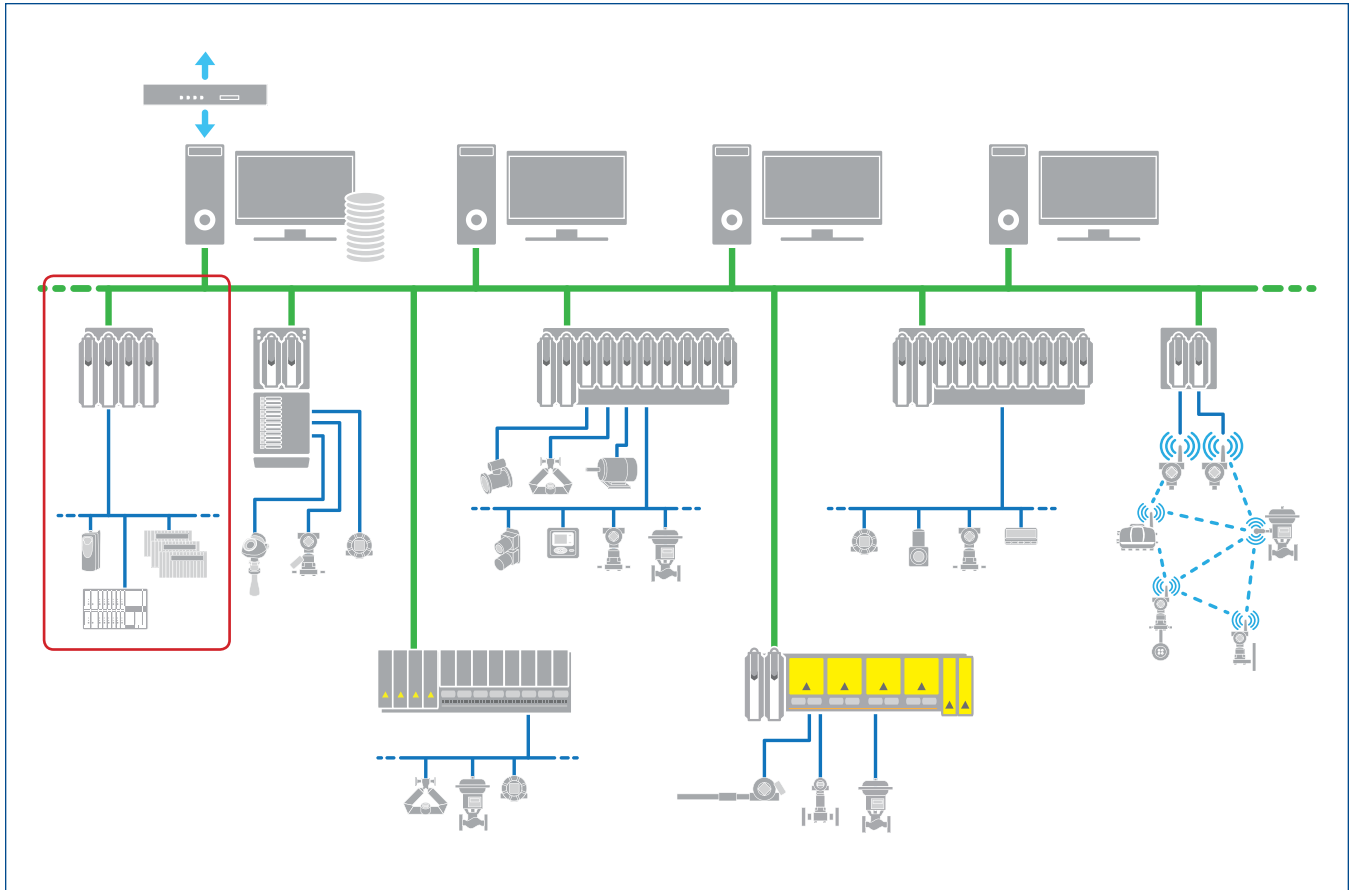

The DeltaV system with S-series VIM2 and Ethernet I/O integration (simplex VIM2 and DeltaV controller shown).

## Supported Industrial Ethernet Protocols

**Modbus TCP.** The VIM2 with the Modbus TCP Master Driver supports the following Modbus communications protocol function codes to read and write values to and from a Modbus slave device, as specified by the Modbus Application Protocol Specification from Modbus-IDA.org.

The VIM2 Modbus TCP/IP Driver supports the following Modbus function codes:

- Code 1 - Read Coil Status
- Code 2 - Read Input Status
- Code 3 - Read Holding Registers
- Code 4 - Read Input Registers
- Code 5 - Force Single Coil
- Code 6 - Preset Single Register
- Code 8 - Diagnostic Loop Back Test
- Code 15 - Force Multiple Coils
- Code 16 - Preset Multiple Registers

The VIM2 can function as both a Modbus TCP master and slave simultaneously. Master or slave mode is set at the virtual port level. In master-only mode, this driver can communicate with a maximum of 96 slave devices in a simplex and with 192 slave devices in dual simplex setups. Systems that use both master and slave mode can communicate with a maximum of 32 slaves and 32 masters at the same time. The master and slave capability is available in simplex implementations only. In redundant applications, only master mode is supported.

**EtherNet/IP.** The VIM2 with the EtherNet/IP Scanner Driver provides the following compatible functions using the Control and Information Protocol (CIP) as defined in the EtherNet/IP Specification from Open DeviceNet Vendor Association and ControlNet International.

The VIM2 EtherNet/IP Scanner Driver provides:

- IO Adapter (Transport Class 1 target, using connected implicit messaging)
- Unconnected explicit (UCMM) messaging client
  - Embedded DF1 (PCCC)

Embedded DF1 is supported in simplex, dual simplex, and redundant configurations. IO Adapter messaging is supported only in simplex and dual simplex configurations.

**This driver can communicate with a maximum of 32 slave devices in a simplex and with 64 slave devices in dual simplex setups. In redundant applications, only 16 slave devices are supported.**

**FMC722 Subsea.** The VIM2 with the FMC722 Driver supports communications with FMC Technologies Topside Processing Unit (TPU) using the FMC722 (TPC) protocol.

**A maximum of 32/64 slave devices is supported with the FMC722 Subsea driver**

**ODVA EtherNet/IP.** The VIM2 with the ODVA EtherNet/IP Scanner Driver provides the following compatible functions using the Control and Information Protocol (CIP) as defined in the EtherNet/IP Specification from Open DeviceNet Vendor Association and ControlNet International. The driver can emulate Programmable Serial cards or DeviceNet cards on the DeltaV I/O Bus.

The VIM2 ODVA EtherNet/IP Driver provides:

- I/O Scanner (Transport Class 1 originator, using connected implicit messaging)
- I/O Adapter (Transport Class 1 target, using connected implicit messaging)
- Unconnected explicit (UCMM) messaging client
- Connected explicit (Transport Class 3 originator) messaging client

**This driver can only communicate in a simplex or dual simplex setup. A maximum of 244 slave devices in a simplex and 488 slave devices in dual simplex setups is supported.**

**PROFINET.** The VIM2 with the PROFINET Driver acts as an I/O Controller in a PROFINET network, exchanging data with I/O Devices using Real-Time (RT) messaging. Isochronous real-time (IRT) communication is not supported. It supports the PROFINET v2.2 specification.


Field device communications comprise I/O data, alarms and diagnostics. Other aspects of field data, e.g. data records and logbook information, are not supported. Alarm and diagnostic information is reported to PC based VIMNet Explorer tools. Only I/O data and corresponding status are reported to the DeltaV controller.

## DeltaV Licensing Guidelines

DeltaV Software Licensing Requirements (DST count) will be used with the ODVA Ethernet/IP driver when DeviceNet Card-based Datamapping is selected as for any other v12 and later DeviceNet device. The number of DSTs per connected DeviceNet device will be one DST in most cases. The DST type counted will be the most valuable type used to reference a signal for each device. If references are made to more than 16 signals from a device, additional signal references beyond the 16th reference will each count as a DST. A motor starter, for example, with 4 to 5 signal references, will consume one DST (typically an AI or DO DST). A remote I/O island will consume one DST for the first 16 signal references, and one DST for each additional signal reference beyond the 16th signal reference. For DeltaV versions prior to v12, each signal referenced from a connected Ethernet device will count as one DST each.

Using all other drivers and options, the DST count will be impacted by DeltaV Module configuration by using registers, in the same way as Serial Card registers. The following guidelines can be applied:

- A DeltaV Serial Card data set can contain up to 100 values (a value can be any Boolean, 8-bit or 16-bit number), and up to 16 data sets are supported by each of the 2 ports on the serial card. If the data set registers are configured as floating point or 32-bit values, then the maximum value is 50. However, the serial device, in general, limits the total capacity of the interface.
- Each data set counts as one DST as long as a single module references all values in the data set. If multiple modules reference values in a data set, then the DST count for the data set is equal to the number of modules referencing the data set.
- Values used in modules containing control function blocks will be counted as Control DSTs.

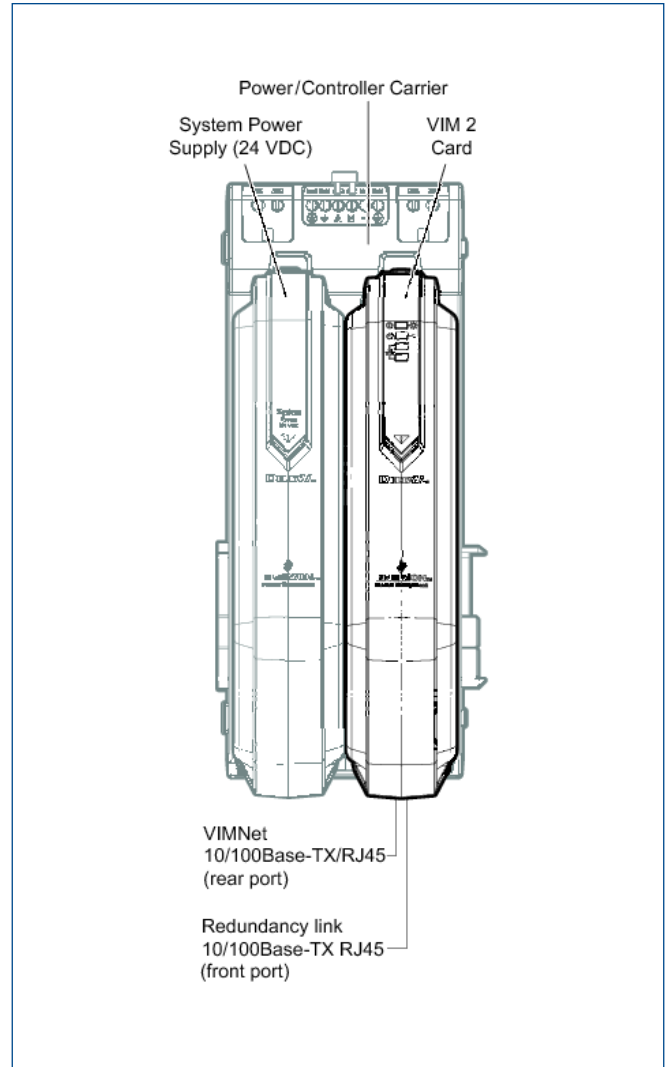

S-series system power supply and VIM2 details.

## Hardware Specifications

Specifications for the S-series Virtual I/O Module 2	
Power Requirement	Supplied by System Power Supply through 2-wide Power/Controller Carrier
Maximum Current	1.4A at 5 V DC
Fuse Protection (Internal)	3.0A, non-replaceable fuses
Power Dissipation	5.0W typical, 7.0W maximum
User Memory	48 MB
Mounting	On right slot of power/controller carrier
Size Dimensions	4.1 cm w x 19.9 cm h x 14.0 cm d
Environmental specifications	
Operating Temperature	-40°C to 60°C (-40°F to 140°F)
Storage Temperature	-40°C to 85°C (-40°F to 185°F)
Relative Humidity	5 to 95%, non-condensing
Airborne Contaminants	ISA-S71.04-1985 Airborne Contaminants Class G2
Shock (Normal Operating Conditions)	10 g ½-sine wave for 11 ms
Vibration (Operative Limit)	1 mm peak-to-peak from 5 Hz to 16 Hz, 0.5 g from 16 Hz to 150 Hz
LED Indicators – On Status	
Green – Power	Indicates DC power is applied.
Red – Error	Indicates an error condition.
Green – Active	Indicates that the VIM2 is commissioned and active.
Green – Standby	Not used.
Yellow Flashing – Network	Indicates valid network communication.
Yellow, Flashing – Ctrl I/O	Indicates valid DeltaV I/O Bus communication.
All except Power flashing, alternating even and odd	Visual ID of controller initiated from user interface software by ping command
External connections	
Plant Ethernet Network	Two 100BaseTX RJ-45 connectors (simplex mode only)
Plant Ethernet Network and Redundancy Link	One 100BaseTX RJ-45 connector (redundant mode) One 100BaseTX RJ-45 connector (cable supplied with redundant modules)

## Software Specifications

Ethernet I/O Capacity	
Max. Emulated DeltaV Cards	4 simplex in simplex setup 8 simplex in dual simplex setup 4 redundant in redundant setup
Amount of Slaves for Serial Data Drivers	
Modbus TCP, Ethernet/IP	32 in simplex setup / 64 in dual simplex setup 16 in redundant setup
FMC722 Subsea	32 in simplex setup / 64 in dual simplex setup
ODVA Ethernet/IP	244 in simplex setup / 488 in dual simplex setup
Amount of Slaves for Bus Card Drivers	
ODVA Ethernet/IP	244 in simplex setup / 488 in dual simplex setup
Max. Data Sets for Serial Data Drivers	
Modbus TCP, Ethernet/IP	128 in simplex setup / 256 in dual simplex setup 128 in redundant setup
FMC722 Subsea	128 in simplex setup / 256 in dual simplex setup
ODVA Ethernet/IP	128 in simplex setup / 256 in dual simplex setup
Max. Data for Bus Card Drivers	
ODVA Ethernet/IP	DeviNet Card max limits

## Certifications

The following certifications are available for S-series Virtual I/O Module 2:

- CE:
  - EMC-EN 61326-1
- FM:
  - FM 3600
  - FM 3611
  - FM 3810
- CSA:
  - CSA C22.2 No. 213-M1987
  - CSA C22.2 No. 1010-1
- ATEX:
  - ATEX 94/9/EC
  - EN60079-0
  - EN60079-15
- IEC-Ex:
  - IEC60079-0
  - IEC60079-15
- Marine Certifications: IACS E10
  - ABS Certificate of Design Assessment.
  - DNV-GL Marine Certificate.



## Hazardous Area/Location

S-series Virtual I/O Module 2 can be installed and used based on the following Standards:

- FM (USA):

Class I, Division 2, Groups A, B, C, D, T4

- cFM (Canada):

Class I, Division 2, Groups A, B, C, D, T4

- ATEX:

 Ex nA [nL] IIC T4 Gc

 Ex nA [ic] IIC T4 Gc

 Ex nA nC IIC T4 Gc

- IEC-Ex:

 Ex nA IIC T4 Gc

*Regarding the Installation instructions please refer to the following Documents: Class 1 Division 2 Installation Instructions DeltaV S-series 12P5402 and Zone 2 Installation Instructions DeltaV S-series 12P5404*

## Ordering Information

Description	Model Number
S-series Virtual I/O Module 2	SE4026
Redundant S-series Virtual I/O Module 2 (Includes two VIM2s and one redundancy link cable)	SE4027

## MYNAH Technologies Product Ordering Information

Description	Model Number
Mimic Simulation Software	Contact MYNAH Technologies
Modbus TCP/IP Master Driver	Contact MYNAH Technologies
Ethernet/IP Scanner Driver	Contact MYNAH Technologies
FMC722 Ethernet Protocol Driver	Contact MYNAH Technologies
ODVA Ethernet/IP Protocol Driver	Contact MYNAH Technologies
PROFINET Protocol Driver	Contact MYNAH Technologies

## Related 3<sup>rd</sup> Party Products

- **VIMNet Explorer.** Used to commission and flash upgrade the VIM2 and to configure the Ethernet I/O network. Provided with the DeltaV v12 and later software.

**MYNAH Technologies.** For more information about the Mimic Simulation Software or Ethernet I/O drivers, please contact MYNAH at:

MYNAH Technologies  
 390 South Woods Mill Road, Suite 100  
 Chesterfield, MO 63017, USA  
 +1.636.728.2000  
**Support@MYNAH.com**  
**www.mynah.com**

## Prerequisites

- One power/controller carrier per VIM2. Please refer to the S-series Horizontal Carriers product data sheet for details.
- One dedicated system power supply per VIM2. Please refer to the S-series Power Supplies product data sheet for details.
- To use for I/O Simulation with MYNAH's Mimic Simulation Software, a Mimic base license and DeltaV Railbus Driver Pack must be purchased from MYNAH. Technical support for the Mimic Simulation Software and I/O simulation driver is provided by MYNAH.
- To use for Ethernet I/O integration, an Ethernet I/O driver must be purchased from MYNAH. Technical support for the Ethernet I/O drivers is provided by MYNAH.
- DeltaV v11.3.1 Systems and higher.

## System Compatibility

- S-series VIM can physically be replaced with S-series VIM2 back to v11.3.1.
- Existing Drivers from S-series VIMs will not work with the S-series VIM2 and need to be converted by Mynah before they can be reused.

### Emerson

#### North America, Latin America:

1100 W. Louis Henna Blvd.  
Round Rock, TX 78681-7430  
☎ +1 800 833 8314 or  
☎ +1 512 832 3774

#### Asia Pacific:

☎ 65 6777 8211

#### Europe, Middle East:

☎ +41 41 768 6111  
🌐 [www.emerson.com/deltav](http://www.emerson.com/deltav)

©2017, Emerson. All rights reserved.

The Emerson logo is a trademark and service mark of Emerson Electric Co. The DeltaV logo is a mark of one of the Emerson family of companies. All other marks are the property of their respective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the designs or specifications of our products at any time without notice.