

DVC6200 or DVC2000 Digital Valve Controller on 1051 and 1052 Size 33 Actuators (End Mount)

Mounting Instructions

D103448X012
June 2010

Use these instructions to mount a Fisher® FIELDVUE™ DVC6200 or DVC2000 digital valve controller on Fisher 1051 and 1052 size 33 actuators.



WARNING

Avoid personal injury or property damage from sudden release of process pressure or bursting of parts. Before performing any maintenance operations:

- Always wear protective clothing and eyewear.
- Do not remove the actuator from the valve while the valve is still pressurized.
- Disconnect any operating lines providing air pressure, electric power, or a control signal to the actuator. Be sure the actuator cannot suddenly open or close the control valve.
- Use bypass valves or completely shut off the process to isolate the control valve from process pressure. Relieve process pressure from both sides of the control valve.
- Vent the pneumatic actuator loading pressure and relieve any actuator spring precompression.
- Use lock-out procedures to be sure that the above measures stay in effect while you work on the equipment.
- Check with your process or safety engineer for any additional measures that must be taken to protect against process media.

Refer to figure 2 and the parts list for mounting parts identification. Refer to the DVC6200 or DVC2000 instruction manual instrument parts identification. Refer to the appropriate actuator instruction manual for actuator installation, operation, maintenance, and parts identification.

1. Isolate the control valve from the process line pressure and release pressure from both sides of the valve body. Shut off all pressure lines to the actuator, releasing all pressure from the actuator. Use lock-out procedures to be sure that the above measures stay in effect while you work on the equipment.

2. The instrument can be mounted in four different orientations on the 1051 or 1052. Figure 1 shows the instrument mounted upright relative to the actuator spring barrel.

3. Attach the coupler (key 1) to the actuator shaft using the pan head screws (key 2) and tighten. For best visibility, the coupler should be oriented on the shaft so that the pointer will rotate in the quadrant above or below the instrument as shown in figure 2.

4. Attach the mounting bracket (key 3) to the actuator housing cover, using hex head cap screws (key 13), but do not tighten the cap screws.

5. Place the pointer (key 4) before attaching the magnet assembly (key 5) to the coupler using pan head screws (key 6) and tighten.

The magnet assembly must be oriented per figure 1, so that the flats are approximately as shown relative to the channel in the instrument housing when at the mid-travel position.

6. Adjust the mounting bracket so that the magnet assembly is visually centered in the mounting bracket center hole and tighten the cap screws.

7. Attach the mounting plate (key 7) to the mounting bracket using pan head screws (key 11) and two washers (key 9) and tighten.

8. Attach the travel indicator scale (key 8) to the mounting plate using remaining two plain washers (key 9) and pan head machine screws (key 10). Refer to figure 2.

9. Attach the digital valve controller to the mounting bracket using hex head cap screws (key 12) but do not tighten the screws. Visually adjust the digital valve controller so that the magnet assembly is centered in the housing channel and then tighten the fasteners. Recheck the magnet assembly position again after tightening.

10. Connect and calibrate the instrument as described in the appropriate instruction manual.

For additional information concerning the mounting, setup, calibration, and maintenance of the DVC6200 or the DVC2000 digital valve controller refer to the appropriate instruction manual.



DVC6200 or DVC2000 Digital Valve Controller on 1051 and 1052 Size 33 Actuators (End Mount)

Mounting Instructions
D103448X012
June 2010

Note

Neither Emerson, Emerson Process Management, nor any of their affiliated entities assumes responsibility for the selection, use, or maintenance of any product. Responsibility for the selection, use, and maintenance of any product remains with the purchaser and end user.


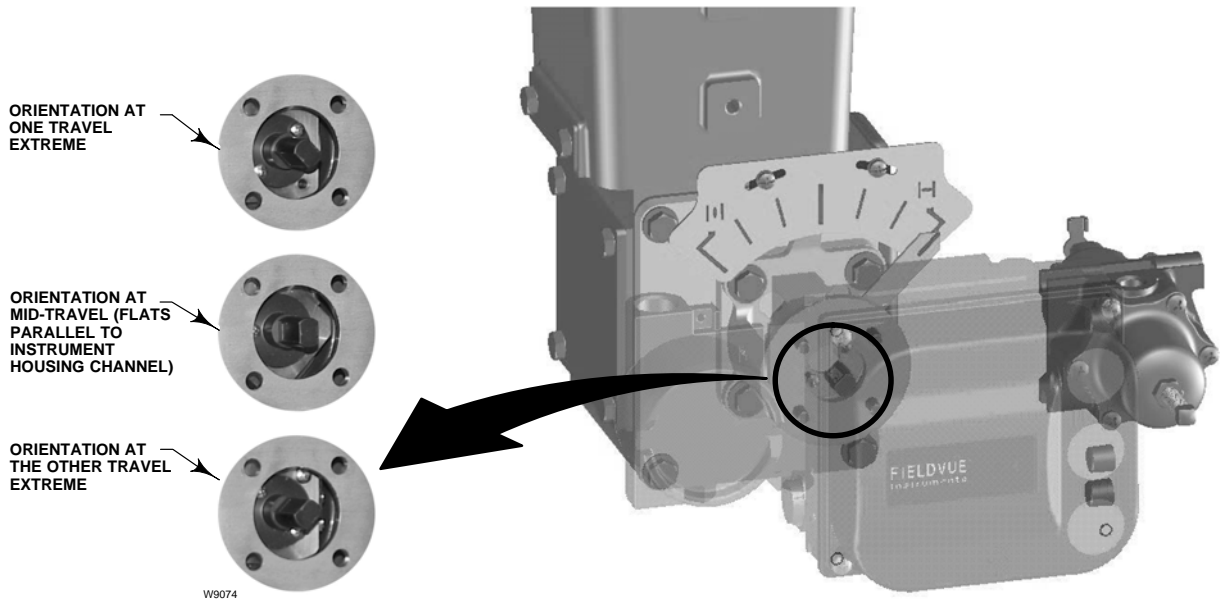


Figure 1. Magnet Assembly Orientation

Mounting Instructions

D103448X012
June 2010

DVC6200 or DVC2000 Digital Valve Controller on 1051 and 1052 Size 33 Actuators (End Mount)

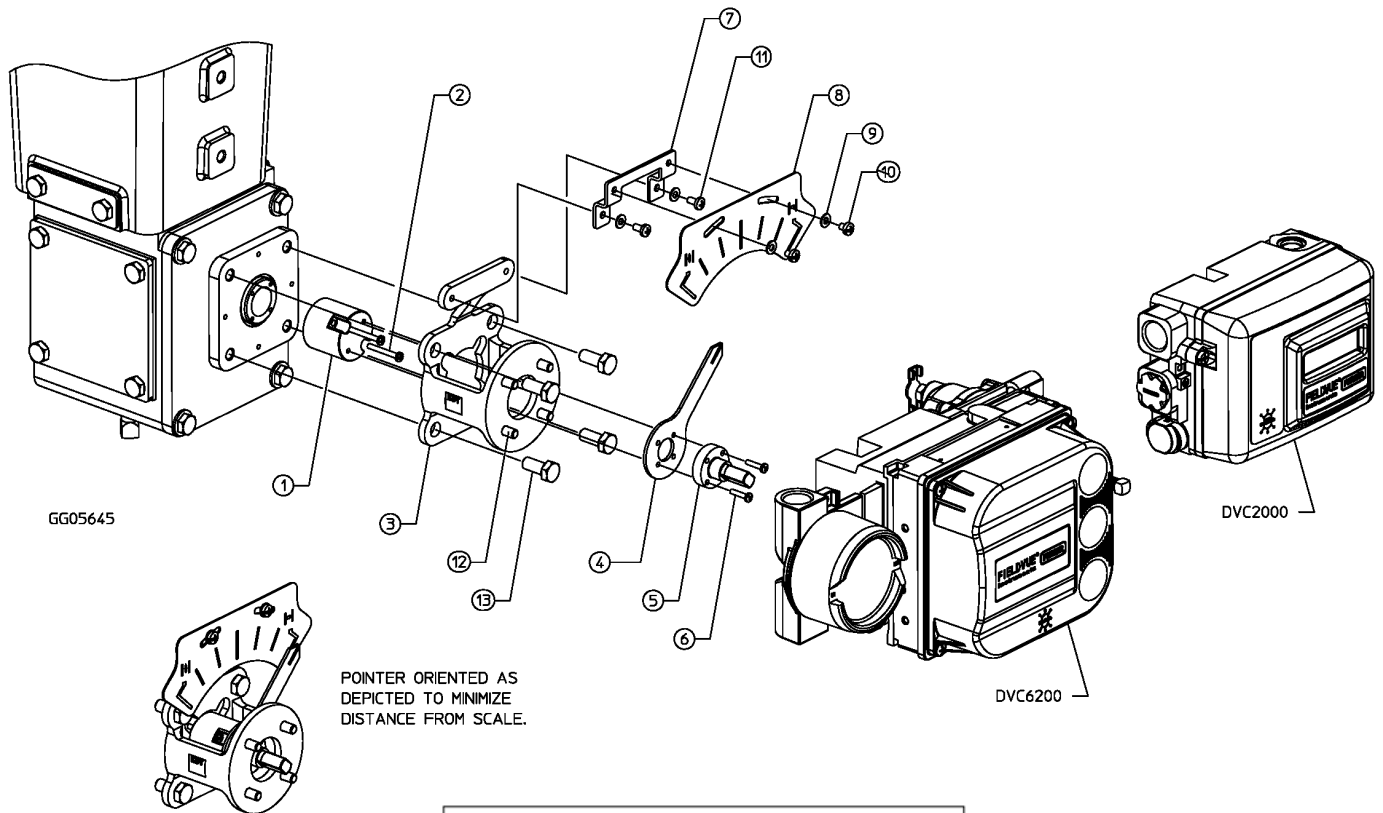

POINTER ORIENTED AS
DEPICTED TO MINIMIZE
DISTANCE FROM SCALE.

PART LIST		
KEY	QTY	DESCRIPTION
1	1	COUPLER
2	2	5-40UNCX1.00" PAN HD SCREW
3	1	MOUNTING BRACKET
4	1	POINTER
5	1	MAGNET ASSEMBLY
6	2	M3X0.5X14 PAN HD SCREW
7	1	MOUNTING PLATE
8	1	TRAVEL INDICATOR SCALE
9	4	PLAIN WASHER
10	2	M4X0.7X5 PAN HD SCREW
11	2	M4X0.7X8 PAN HD SCREW
12	4	M6X1X14 HEX HD CAP SCREW
13	4	5/16-18UNCX0.75" HEX HD CAP SCREW

Figure 2. Mounting Parts Identification

Fisher and FIELDVUE are marks owned by one of the companies in the Emerson Process Management business division of Emerson Electric Co. Emerson Process Management, Emerson, and the Emerson logo are trademarks and service marks of Emerson Electric Co. All other marks are the property of their respective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice. Neither Emerson, Emerson Process Management, nor any of their affiliated entities assumes responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use, and maintenance of any product remains solely with the purchaser and end-user.

Emerson Process Management

Marshalltown, Iowa 50158 USA
Sorocaba, 18087 Brazil
Chatham, Kent ME4 4QZ UK
Dubai, United Arab Emirates
Singapore 128461 Singapore

www.Fisher.com

