

Mounting Instructions

D103440X012
May 2010

DVC6200 or DVC2000 Digital Valve Controller on 585C/585CR Size 50 Actuators with or without Handjack

Use these instructions to mount a Fisher® FIELDVUE™ DVC6200 or DVC2000 digital valve controller on Fisher 585C/585CR size 50 actuators with or without handjack.

procedures to be sure that the above measures stay in effect while you work on the equipment.

WARNING

Avoid personal injury or property damage from sudden release of process pressure or bursting of parts. Before performing any maintenance operations:

- **Always wear protective clothing, gloves, and eyewear.**
- **Do not remove the actuator from the valve while the valve is still pressurized.**
- **Disconnect any operating lines providing air pressure, electric power, or a control signal to the actuator. Be sure the actuator cannot suddenly open or close the control valve.**
- **Use bypass valves or completely shut off the process to isolate the control valve from process pressure. Relieve process pressure from both sides of the control valve.**
- **Vent the pneumatic actuator loading pressure and relieve any actuator spring precompression.**
- **Use lock-out procedures to be sure that the above measures stay in effect while you work on the equipment.**
- **Check with your process or safety engineer for any additional measures that must be taken to protect against process media.**

Refer to figure 2 and the parts list for mounting parts identification. Refer to the DVC6200 or DVC2000 digital valve controller instruction manual for digital controller parts identification. Refer to the appropriate actuator instruction manual for actuator installation, operation, maintenance, and parts identification.

1. Isolate the control valve from the process line pressure and release pressure from both sides of the valve body. Shut off all pressure lines to the actuator, releasing all pressure from the actuator. Use lock-out

WARNING

To avoid personal injury due to the sudden, uncontrolled movement of parts, do not loosen the stem connector cap screws when the stem connector has spring force applied to it.

2. Remove the stem connector cap screws and use the longer cap screws (key 9) to attach the connector arm (key 3) to the valve stem connector. Reassemble the valve stem connector using the spacers (key 10) and two hex nuts (key 7). Install the connector arm (key 3) using the plain washer (key 8) and the two remaining hex nuts (key 7) when reassembling the valve stem connector.
3. Attach the extension arm (key 6) to the connector arm using two pan head machine screws (key 4) but do not tighten. See figure 2 for extension arm orientation.
4. Attach the magnet assembly (key 5) to the extension arm with two pan head machine screws (key 4) but do not tighten (the magnet assembly can be inverted 180° without effect).
5. Attach the mounting bracket assembly (key 1) to the yoke using the two socket head screws (key 2).
6. Push the cap screws and the O-ring in the mounting bracket groove and then attach the black plastic alignment template to the mounting bracket by inserting the two protruding posts into the mounting holes in the bracket and simultaneously positioning the magnet assembly so that it can slide into the channel in the alignment template. The magnet assembly should be fully in the alignment template channel so that the extension arm is contacting the back of the alignment template but not bending it. Tighten pan head machine screws (key 4), attaching the extension arm to the connector arm but do not yet tighten the pan head machine screws attaching the magnet assembly.
7. For an air-to-extend actuator, slide the magnet assembly (key 5) so that the bottom marking aligns with the sensor index mark on the alignment template (see figure 1). The magnet assembly's top marking is used for air-to-retract. The mounting bracket may require vertical repositioning to get the magnet assembly in the correct location. When the magnet assembly is properly positioned, remove the alignment template and tighten the two pan head machine screws (key 4).



DVC6200 or DVC2000 Digital Valve Controller on 585C/585CR Size 50 Actuators with or without Handjack

Mounting Instructions
D103440X012
May 2010

8. Attach the digital valve controller to the mounting bracket and tighten the three hex head cap screws (key 1b).


9. Check the position of the magnet assembly (key 5) in the channel of the digital valve controller housing and ensure that it is visually centered between the channel walls and has adequate clearance with the backside of the channel (approximately 3 mm).

10. Connect and calibrate the digital valve controller as described in the instruction manual or quick start guide.

For additional information concerning mounting, setup, calibration, or maintenance of the DVC6200 or DVC2000 digital valve controller, refer to the appropriate instruction manual.

Note



Neither Emerson, Emerson Process Management, nor any of their affiliated entities assumes responsibility for the selection, use or maintenance of any product. Responsibility for the selection, use and maintenance of any product remains with the purchaser and end user.

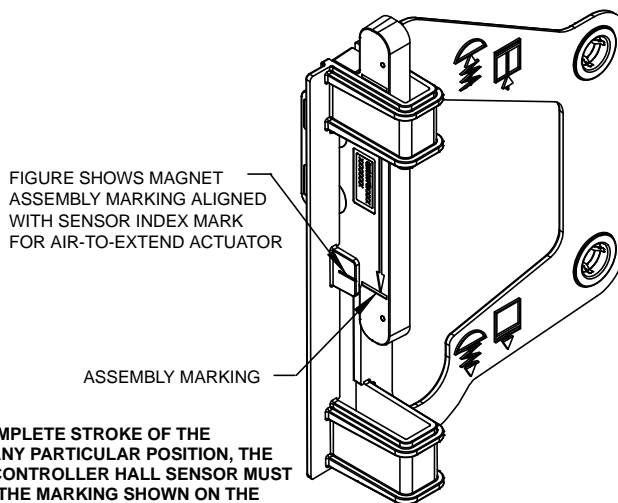

NOTE:
DURING THE COMPLETE STROKE OF THE ACTUATOR, AT ANY PARTICULAR POSITION, THE DIGITAL VALVE CONTROLLER HALL SENSOR MUST REMAIN WITHIN THE MARKING SHOWN ON THE MAGNET ASSEMBLY.

GE43826

Figure 1. Alignment Template

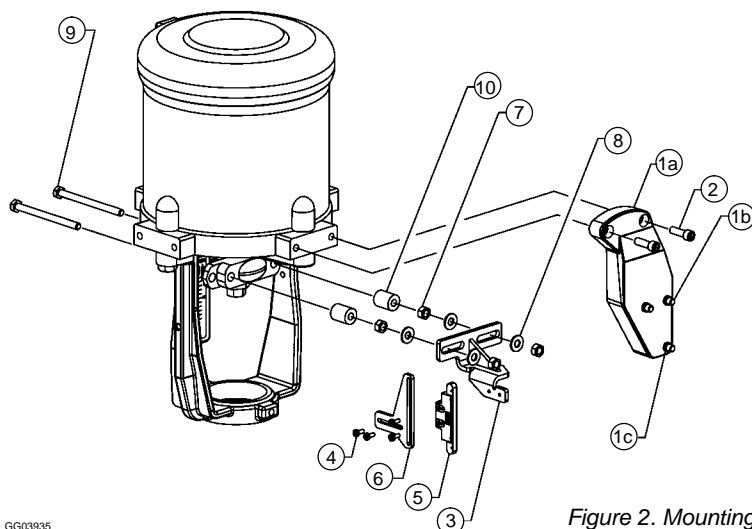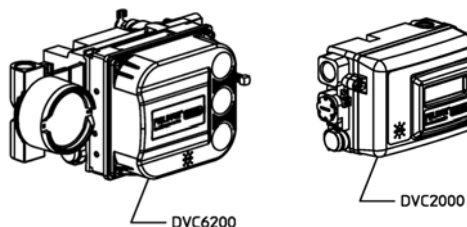

GG03935

Figure 2. Mounting Parts Identification

PARTS LIST		
KEY	QTY	DESCRIPTION
1		MOUNTING BRACKET ASSEMBLY
1a	1	MOUNTING BRACKET
1b	3	M8 X 1.25 X 40 HEX HD CAP SCREW
1c	3	O-RING
2	2	5/16"-18UNCX1.00" SOCKET HD SCREWS
3	1	CONNECTOR ARM
4	4	M4 X 0.7 X 10 PAN HD MACHINE SCREW
5	1	MAGNET ASSEMBLY
6	1	EXTENSION ARM
7	4	5/16"-18UNC HEX NUT
8	4	5/16" PLAIN WASHER
9	2	5/16"-18UNCX4.00" HEX HD CAP SCREW
10	2	SPACER
---	1	ALIGNMENT TEMPLATE

Fisher and FIELDVUE are marks owned by one of the companies in the Emerson Process Management business division of Emerson Electric Co. Emerson Process Management, Emerson, and the Emerson logo are trademarks and service marks of Emerson Electric Co. All other marks are the property of their respective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice. Neither Emerson, Emerson Process Management, nor any of their affiliated entities assumes responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use, and maintenance of any product remains solely with the purchaser and end user.

Emerson Process Management

Marshalltown, Iowa 50158 USA
Sorocaba, 18087 Brazil
Chatham, Kent ME4 4QZ UK
Dubai, United Arab Emirates
Singapore 128461 Singapore

www.Fisher.com

