# FM Hazardous Area Approvals Fisher™ 3661 Positioners

# Hazardous Area Classifications and Special Instructions for "Safe Use" and Installations in Hazardous Locations

Certain nameplates may carry more than one approval, and each approval may have unique installation/wiring requirements and/or conditions of "safe use". These special instructions for "safe use" are in addition to, and may override, the standard installation procedures. Special instructions are listed by approval.

## Note

This information supplements the nameplate markings affixed to the product and the 3660 and 3661 Positioners instruction manual (<u>D101402X012</u>), available from your <u>Emerson Automation Solutions sales office</u> or at www.Fisher.com.

Always refer to the nameplate itself to identify the appropriate certification.

# **▲** WARNING

Failure to follow these conditions of "safe use" could result in personal injury or property damage from fire or explosion, or area re-classification.

# Intrinsically Safe, Type n, and Non-incendive

No special conditions for safe use.

Refer to table 1 for approval information.

Table 1. Approval Information


Certification Body	Certification Obtained	Entity Rating	Temperature Code
FM	Intrinsically Safe Class I Zone 0 AEx ia IIC T4/T5/T6 per drawing GE28590 (see figure 1) Class I, II, III Division 1 GP A,B,C,D,E,F,G T4/T5/T6 per drawing GE28590 (see figure 1)	Vmax = 30 VDC Imax = 150 mA Pi = 1.25 W Ci = 0 nF Li = 0 mH	T4 (Tamb ≤ 82°C) T5 (Tamb ≤ 62°C) T6 (Tamb ≤ 47°C)
	Type n Class I Zone 2 AEx nA IIC T5		T5 (Tamb ≤ 82°C)
	Class I Division 2, GP A,B,C,D T5 Class II, III Division 2, GP F,G T5		T5 (Tamb ≤ 82°C)





February 2017 D104229X012

Figure 1. FM Loop Schematic for Fisher 3661 Positioner (Drawing GE28590)

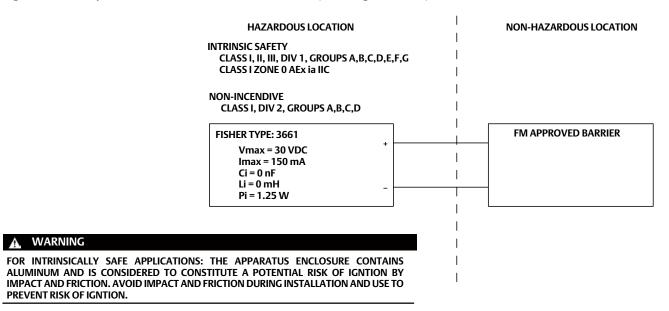

#### NOTES:

- THE INSTALLATION MUST BE IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE (NEC), NFPA 70, ARTICLE 504 AND ANSI/ISA RP12.6 OR ARTICLE 505.
- 2. CLASS 1, DIV 2 APPLICATIONS MUST BE INSTALLED AS SPECIFIED IN NEC ARTICLE 501-4(B). EQUIPMENT AND FIELD WIRING IS NON-INCENDIVE WHEN CONNECTED TO APPROVED BARRIERS WITH ENTITY PARAMETERS.
- 3. LOOPS MUST BE CONNECTED ACCORDING TO THE BARRIER MANUFACTURE'S INSTRUCTIONS.
- 4. MAXIMUM SAFE AREA VOLTAGE SHOULD NOT EXCEED 250 Vrms.
- ${\bf 5.\,RESISTANCE\,BETWEEN\,BARRIER\,GROUND\,AND\,EARTH\,GROUND\,MUST\,BE\,LESS\,THAN\,ONE\,OHM.}$
- 6. NORMAL OPERATING CONDITIONS 30 VDC 20 mADC.
- 3. FOR ENTITY INSTALLATION (I.S. AND NI):

Vmax > Voc or Vt Imax > Isc or It Pi > Po, or Pt

Ci + Ccable < Ca, Li + Lcable < La.

GE28590-B

Neither Emerson, Emerson Automation Solutions, nor any of their affiliated entities assumes responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use, and maintenance of any product remains solely with the purchaser and end user.

Fisher is a mark owned by one of the companies in the Emerson Automation Solutions business unit of Emerson Electric Co. Emerson Automation Solutions, Emerson, and the Emerson logo are trademarks and service marks of Emerson Electric Co. All other marks are the property of their respective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

### **Emerson Automation Solutions**

Marshalltown, Iowa 50158 USA Sorocaba, 18087 Brazil Cernay, 68700 France Dubai, United Arab Emirates Singapore 128461 Singapore

www.Fisher.com

