


# DeltaV™ Network Time Synchronization

This document describes how DeltaV™ system time is managed using Network Time Servers.

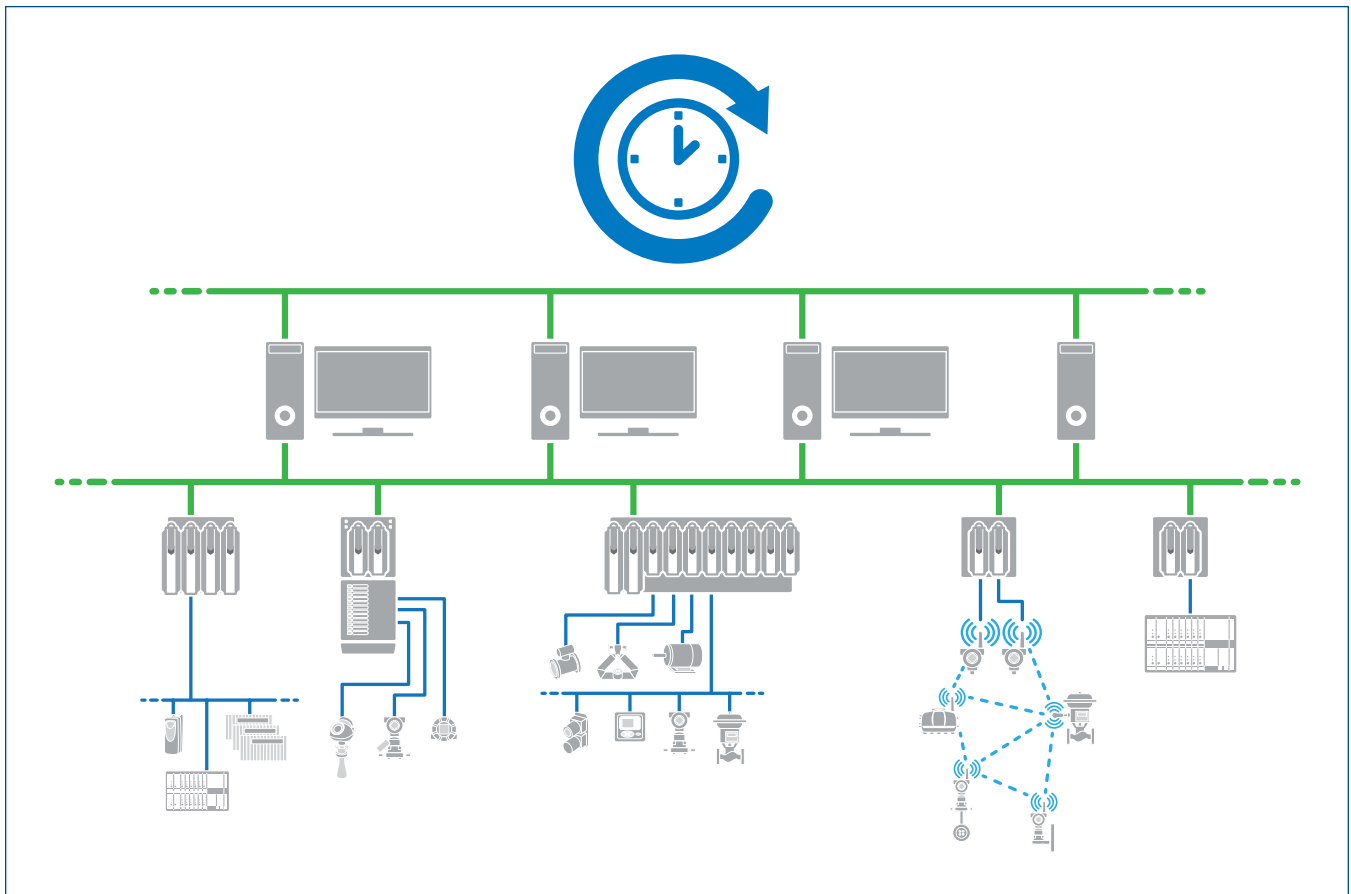

**Table of Contents**

Introduction ..... 3

Network Time Protocol ..... 3

DeltaV Time Synchronization ..... 3

    DeltaV Workstations as Times Servers for the DeltaV Area Control Network (ACN) ..... 3

    Using Stratum 1 NTP TimeServers DirectlyConnected tothe DeltaV Area Control Network (ACN) ..... 3

    Using Stratum 1 NTP Time Servers on a Remote Network ..... 4

Time Server Devices ..... 5

## Introduction

Starting with v5.2, DeltaV systems use the Network Time Protocol (NTP) to maintain system time on workstations, servers, and embedded nodes. The DeltaV system uses NTP to keep all the DeltaV work stations and controllers in synchronization with a master time server.

Time synchronization within DeltaV systems is important for the following use cases/applications, but not limited to:

Support the Sequence of Events (refer to the SOE product data sheet) capability, which requires very accurate time synchronization between Control Network devices.

## Network Time Protocol

NTP is a standard communication protocol that allows computers to synchronize with a time server across a network. NTP time servers are arranged in a hierarchy. At the top (Stratum 1) are the primary servers. Then come secondary servers (Stratum 2 and so on down to Stratum 16).

## DeltaV Time Synchronization

### DeltaV Workstations as Time Servers for the DeltaV Area Control Network (ACN)

The DeltaV system supports master and backup time servers as a standard feature. These time servers can be any local DeltaV workstation and they are lower down in the NTP hierarchy. The master and backup time servers are defined under the 'Properties' of the 'Physical Network' in DeltaV Explorer.

By default, the master time server is the Professional PLUS Station. The backup time server can be any local workstation other than the master time server. A download of the 'Setup' for the 'Control Network' is required if a time server is changed to a different workstation.

For DeltaV workstations on a remote network, the remote workstations configured as Remote Access Server is the master time server.

To set the time on a DeltaV system that is not using Stratum 1 NTP servers, the existing 'Set/Synchronize Network Time' utility is used. The time synchronization accuracy for workstations and controllers can be expected to be  $\pm 50$ ms in this configuration.

On this specific setup, the primary and backup time servers can still communicate to a Stratum 1 NTP Timeserver, and this is accomplished by means of a request/response communication model. This is the most common way of deploying DeltaV systems and usually the Stratum 1 NTP Timeserver is connected out of the DeltaV system boundaries as a time reference for other systems and network devices.

### Using Stratum 1 NTP Time Servers Directly Connected to the DeltaV ACN

If a Stratum 1 NTP time server is installed on the ACN, then the DeltaV workstations and embedded nodes will automatically get their time from this server instead. Even the workstations that are defined as master/backup time servers will request time synchronization messages from this NTP server because it is higher up in the NTP hierarchy. Both primary and backup Stratum 1 NTP servers may be deployed.

If the primary NTP server becomes unavailable, then the DeltaV nodes will seek the next-highest time server, which will be the backup NTP server, if available. If there is no backup NTP server (or it also becomes unavailable), then the DeltaV workstations that are defined as time servers will take over.

The Stratum 1 NTP time servers shall be configured with certain predefined IP addresses for them to work on the DeltaV ACN (refer to Table 1 below for these addresses). The configuration of these IP addresses is done through the NTP time server configuration software and not through any DeltaV system application.

	Primary Control Network Address	Secondary Control Network Address
Master NTP Server	10.4.128.1	10.8.128.1
Backup NTP Server	10.4.128.2	10.8.128.2

Table 1 – Stratum 1 NTP time server reserved addresses for the DeltaV ACN.

The ‘Set/Synchronize Network Time’ utility normally should not be used when a Stratum 1 NTP server is in use. The utility will not change the time on the NTP server. The only reason to use this utility should be to set the time on a workstation to be very close to the NTP server time. This helps the workstation achieve quicker synchronization with the NTP server.

The time synchronization accuracy for workstations, using 100Mbps ethernet, can be expected to be ±10ms in this configuration. For DeltaV embedded nodes, the accuracy will be ±1ms (older DeltaV controllers running at 10Mbps are able to achieve ±10ms accuracy). These accuracies can be achieved only when the Stratum 1 time server is directly connected to the DeltaV ACN.

The following network topologies are supported for the control network:

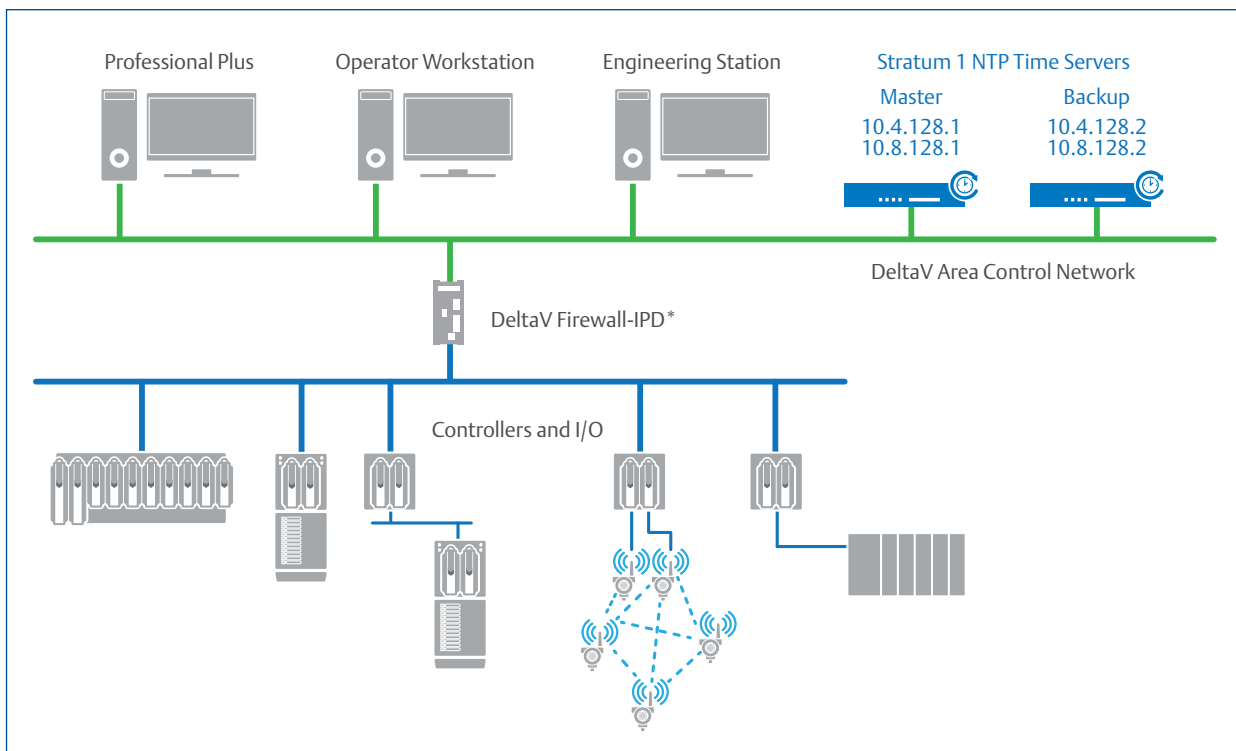



Figure 1 – DeltaV ACN with a master and backup NTP server.

\*Redundancy not included for simplicity on this diagram.

### Using Stratum 1 NTP Time Servers on a Remote Network

For remote DeltaV networks, the same basic topology as described above for the DeltaV ACN is supported. However, in this case the NTP Time servers are usually connected out of the DeltaV system boundaries to either a DMZ network or L3 network – either way, beyond the DeltaV system perimeter protection (e.g. Emerson Smart Firewall).

The IP addresses for NTP time servers on a remote DeltaV network are not controlled by the DeltaV system. However, the DeltaV system needs to be configured with these addresses so that the remote workstations know where to request time from. These IP addresses must be defined under the ‘Properties’ of the ‘Remote Network’ in DeltaV Explorer. A download of the ‘Setup Data’ for the workstation that contains the remote network is required if a time server IP address is changed.

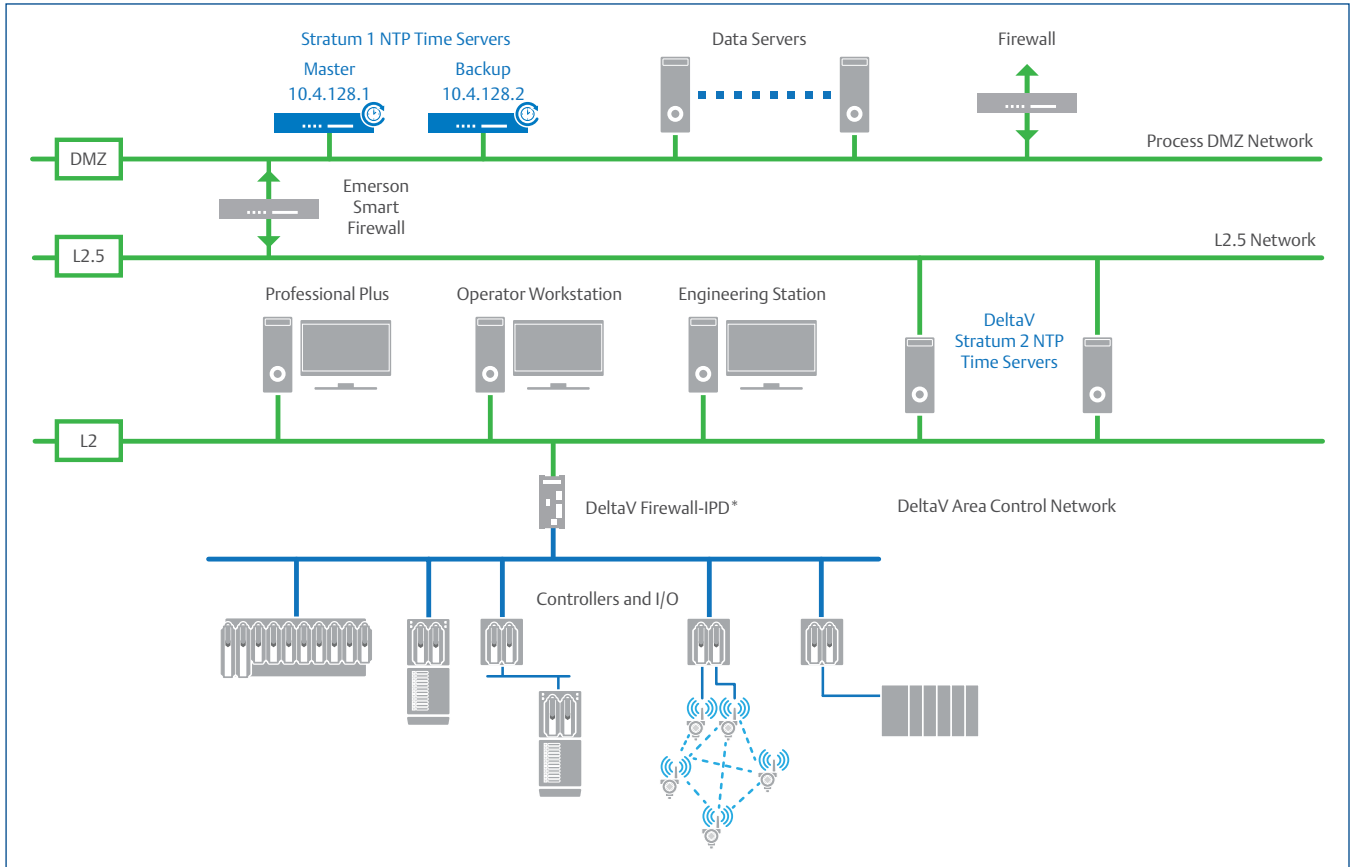

**Figure 2** – Typical configuration using Stratum 1 NTP Time Servers connected outside of DeltaV system boundaries.  
 \*Redundancy not included for simplicity on this diagram.

### Time Server Devices

The integration of NTP Timeservers within DeltaV systems is simple and pretty much non-intrusive, which basically means the timeservers are only used to provide a time reference for DeltaV systems. There commended Stratum 1 NTP time server devices for DeltaV systems are:

- Spectracom SecureSync:** The Spectracom SecureSync 1200 has been tested on DeltaV systems using both Request/Response and Broadcast communication models, therefore it can be used in any of the topology types described in this white paper. It is important to emphasize that the broadcast communication is required if the Timeserver is required for time synchronization within the DeltaV ACN.



**Figure 3** – Illustration showing the Spectracom SecureSync front and back views.

For additional information about how to set up the Spectracom SecureSync for time synchronization with DeltaV systems, please refer to the Guardian Support Knowledge Base Article NK-1600-0234.

Technical and commercial support is provided by Spectracom directly (<http://www.spectracom.com>).

- **Microsemi S650:** Alternatively, we have also tested the Microsemi S650 as a drop-in replacement for the Symmetricon S250 that used to be the only supported time synchronization solution for DeltaV systems in the past. The S250 has reached end of life, and the Microsemi S650 is the currently available option.

The Microsemi S650 does not yet support broadcast communications, therefore it can only be used on remote networks where DeltaV Servers are used as Stratum 2 NTP Timeservers acting as primary/backup time references for the other endpoints and embedded nodes within the DeltaV ACN.



**Figure 4** – Illustration showing the Microsemi S650 front and back views.

For additional information about how to set up the Microsemi S650 for time synchronization with DeltaV systems, please refer to the Guardian Support Knowledge Base Article NK-1600-0238.

Technical and commercial support is provided by Microsemi directly (<http://www.microsemi.com>).

#### Emerson

##### North America, Latin America:

+1 800 833 8314 or  
+1 512 832 3774

##### Asia Pacific:

+65 6777 8211

##### Europe, Middle East:

+41 41 768 6111

[www.emerson.com/deltav](http://www.emerson.com/deltav)

©2017, Emerson. All rights reserved.

The Emerson logo is a trademark and service mark of Emerson Electric Co. The DeltaV logo is a mark of one of the Emerson family of companies. All other marks are the property of their respective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the designs or specifications of our products at any time without notice.